

visual engineering
LIGHTWARE

User's Manual



MX8x8HDMI-Pro
MX8x8DVI-HDCP-Pro

Multimedia Signal Distribution Amplifier

Important Safety Instructions


Class I apparatus construction.

This equipment must be used with a mains power system with a protective earth connection. The third (earth) pin is a safety feature, do not bypass or disable it. The equipment should be operated only from the power source indicated on the product.

To disconnect the equipment safely from power, remove the power cord from the rear of the equipment or from the power source. The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

There are no user-serviceable parts inside of the unit. Removal of the cover will expose dangerous voltages. To avoid personal injury, do not remove the cover. Do not operate the unit without the cover installed.

The appliance must be safely connected to multimedia systems. Follow the instructions described in this manual.

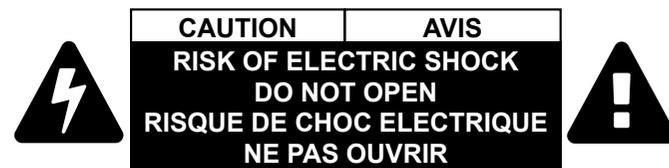

Replacing the AC fuse

Unplug the AC power cord from the device. Locate the AC fuse on the rear panel. Replace only the AC fuse as indicated on the rear panel. Connect the power cord to the switcher and to the AC power source. Make sure the switcher is working properly.

Ventilation


For the correct ventilation and to avoid overheating, ensure enough free space around the appliance. Do not cover the appliance, leave the ventilation holes free and never block or bypass the ventilators (if there are any).

WARNING

To prevent injury, the apparatus is recommended to be securely attached to the floor/wall or mounted in accordance with the installation instructions. The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus. No naked flame sources, such as lit candles, should be placed on the apparatus.

Waste Electrical & Electronic Equipment WEEE

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

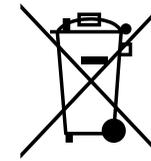

Common Safety Symbols

Symbol	Description
	Alternating current
	Protective conductor terminal
	Caution, possibility of electric shock
	Caution

Symbol Legend

The following symbols and markings are used in the document:

WARNING! Safety-related information that is highly recommended to read and keep in every case!

ATTENTION! Useful information for performing a successful procedure; it is recommended to read.

INFO: A notice, which may contain additional information. Procedure can be successful without reading it.

DEFINITION: The short description of a feature or a function.

TIPS AND TRICKS: Ideas that you may have not known yet, but can be useful.

Navigation Buttons

 Go back to the previous page. If you clicked on a link previously, you can go back to the source page by clicking on the button.

 Navigate to the Table of Contents.

 Step back one page.

 Step forward to the next page.

Document Information

All presented functions refer to the indicated products. The descriptions have been made while testing these functions in accordance with the indicated Hardware/Firmware/Software environment:

Item	Version
Lightware Device Controller (LDC) software	2.7.5b2
Lightware Bootloader Software	3.3.3
MX-DVI-CPU firmware	2.5.0
Control Panel (CP1) firmware	1.0.8
MX-DVI-EDID card firmware	2.3.5
Built-in Web Server	1.1.6
Built-in Web Content	1.4.1
Motherboard hardware revision	1.1
Slot 1 hardware revision	1.1
Slot 2 hardware revision	1.2
Control Panel (CP1) hardware revision	2.1

Document revision: **v3.3**

Release date: **12-12-2023**

Editor: Tamas Forgacs

About Printing

Lightware Visual Engineering supports green technologies and eco-friendly mentality. Thus, this document is primarily made for digital use. If you need to print out a few pages for any reason, follow the recommended printing settings:

- Page size: A4
- Output size: Fit to page or Match page size
- Orientation: Landscape

TIPS AND TRICKS: Thanks to the size of the original page, a border around the content (gray on the second picture below) makes it possible to organize the pages better. After punching holes in the printed pages, they can easily be placed into a ring folder.

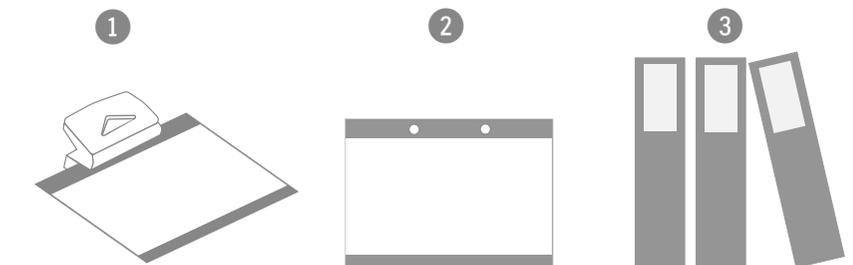


Table of Contents

1. INTRODUCTION	6	6. SOFTWARE CONTROL - LIGHTWARE DEVICE CONTROLLER	27	7.3.12. Clearing the HDCP Key Cache	46
1.1. DESCRIPTION	7	6.1. INSTALL AND UPDATE	28	7.4. PORT SETTINGS	47
1.2. BOX CONTENTS	7	6.2. RUNNING THE LDC	28	7.4.1. Switching One Input to One Output	47
1.3. FEATURES OF THE DEVICE	8	6.3. CONNECTING TO A DEVICE (DEVICE DISCOVERY WINDOW)	29	7.4.2. Switching One Input to All Outputs	47
2. INSTALLATION	9	6.4. THE CROSSPOINT MENU	30	7.4.3. Muting a Specified Output	47
2.1. MOUNTING	10	6.4.1. Grid View	30	7.4.4. Unmuting a Specified Output	47
2.2. CONNECTING STEPS	10	6.5. TILE VIEW	32	7.4.5. Locking an Output	47
3. PRODUCT OVERVIEW	11	6.5.1. Port Tiles	33	7.4.6. Unlocking an Output	48
3.1. FRONT VIEW	12	6.5.2. Display Modes	33	7.4.7. Viewing the Connection State	48
3.2. REAR VIEW	13	6.5.3. Crosspoint Operations	33	7.4.8. Viewing Mute State on All Outputs	48
3.2.1. MX8x8HDMI-Pro	13	6.5.4. Port Properties and Settings	34	7.4.9. Saving a Preset	48
3.2.2. MX8x8DVI-HDCP-Pro	13	6.5.5. Frame Detector	34	7.4.10. Loading a Preset	48
3.2.3. MX8x8DVI-HDCP-Pro	13	6.5.6. Presets	35	7.4.11. Viewing a Preset Without Loading	49
3.3. ELECTRICAL CONNECTIONS	14	6.6. EDID MENU	36	7.4.12. Naming Presets	49
3.3.1. HDMI Connector	14	6.6.1. EDID Operations	37	7.4.13. Naming Inputs	49
3.3.2. DVI-I Connector	14	6.6.2. EDID Summary Window	37	7.4.14. Naming Outputs	49
3.3.3. Ethernet Connector (LAN port)	14	6.6.3. Editing an EDID	38	7.4.15. Querying a Preset Name	49
3.3.4. S/PDIF Connector	14	6.6.4. Creating an EDID	38	7.4.16. Querying an Input Name	49
3.3.5. RS-232 Connector	14	6.7. SETTINGS MENU	39	7.4.17. Querying an Output Name	50
4. OPERATION	15	6.7.1. Configuration Tab	39	7.4.18. Reloading Default Preset Names	50
4.1. POWERING ON	16	6.7.2. Device Information Tab	40	7.4.19. Reloading Default Input Names	50
4.2. FRONT PANEL OPERATIONS	16	6.7.3. Status Tab	40	7.4.20. Reloading Default Output Names	50
4.2.1. Take / Autotake Mode	16	6.7.4. Log Tab	40	7.5. NETWORK CONFIGURATION	51
4.2.2. View Crosspoint State	17	6.7.5. User Preferences	41	7.5.1. Querying the Current IP Configuration	51
4.2.3. View Live Inputs and Attached Sinks	17	6.8. TERMINAL WINDOW	41	7.5.2. Reloading Factory Default IP Settings	51
4.2.4. Preset Operations	18	7. PROGRAMMERS' REFERENCE	42	7.5.3. Enabling the DHCP IP Setting	51
4.2.5. Output Lock	19	7.1. PROTOCOL DESCRIPTION	43	7.6. EDID ROUTER COMMANDS	52
4.2.6. Control Lock	20	7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE	43	7.6.1. Changing the EDID on an Input	52
4.2.7. IP Settings	20	7.3. GENERAL COMMANDS	44	7.6.2. Changing the EDID on All Inputs	52
4.2.8. Control Protocols	20	7.3.1. Viewing the Product Type	44	7.6.3. Saving an EDID to User Memory	52
4.3. FRONT PANEL LCD MENU OPERATION	21	7.3.2. Viewing the Firmware Version of the CPU	44	7.6.4. Viewing the Emulated EDIDs on All Inputs	52
4.3.1. Menu concept	21	7.3.3. Viewing the Serial Number	44	7.6.5. Watching the EDID Validity Table	53
4.3.2. Normal Mode	22	7.3.4. Compile Time	44	7.6.6. Viewing the EDID Header	53
4.3.3. EDID Mode	23	7.3.5. Viewing the Installed Boards	44	7.6.7. Deleting an EDID from Memory	53
4.3.4. Signal Present Mode	23	7.3.6. Viewing Firmware for All Controllers	45	7.6.8. Downloading EDID Content	54
4.4. SOFTWARE CONTROL MODES	24	7.3.7. Restarting the Device	45	7.6.9. Uploading EDID Content to the Router	54
5. SOFTWARE CONTROL – USING THE BUILT-IN WEB	25	7.3.8. Querying Health Status	45	7.7. PORT STATUS COMMANDS	55
5.1. ESTABLISHING THE CONNECTION	26	7.3.9. Viewing the Current Communication Protocol	45	7.7.1. Input Port Status	55
5.2. THE LAYOUT OF THE BUILT-IN WEB	26	7.3.10. Setting the Communication Protocol	45	7.7.2. Output Port Status	55
		7.3.11. Counting HDCP Keys	46	7.7.3. Getting Information about an Input Port	56
				7.7.4. Getting Information about an Output Port	59
				7.7.5. Setting the HDMI Output Port Parameters	60
				7.7.6. Color Range Conversion Settings	60

7.7.7. Measuring Timing Parameters	61
7.8. PROGRAMMERS' REFERENCE – QUICK SUMMARY	62
8. FIRMWARE UPDATE	64
8.1. SHORT INSTRUCTIONS	65
8.2. DETAILED INSTRUCTIONS.....	65
9. TROUBLESHOOTING	67
10. TECHNOLOGIES.....	69
10.1. EDID MANAGEMENT	70
10.1.1. Understanding the EDID.....	70
10.1.2. Advanced EDID Management.....	70
10.2. HDCP MANAGEMENT	71
10.2.1. Protected and Unprotected Content	71
10.2.2. Disable Unnecessary Encryption.....	71
10.3. PIXEL ACCURATE RECLOCKING	72
11. APPENDIX	73
11.1. SPECIFICATIONS	74
11.2. FACTORY DEFAULT SETTINGS.....	75
11.3. FACTORY EDID LIST.....	76
11.4. MECHANICAL DRAWINGS	77
11.5. FURTHER INFORMATION.....	78

1

Introduction

Thank you for choosing Lightware's MX8x8HDMI-Pro series standalone matrix switchers. In the first chapter we would like to introduce the device, highlighting the most important features in the sections listed below:

- ▶ [DESCRIPTION](#)
- ▶ [BOX CONTENTS](#)
- ▶ [FEATURES OF THE DEVICE](#)


1.1. Description

The MX8x8HDMI-Pro digital video router is a HDMI router that supports DVI 1.0 HDCP 1.3 and even HDMI 1.3 deep color standards. This routing switcher offers 8 inputs and 8 outputs with HDMI connectors. The built-in software and hardware features make the router a flexible and integrated solution for AV professionals and high end home theatre applications. Any input can be switched to any one or more outputs without switching delay or frame latency.

Supporting HDMI 1.3 36 bit deep color standard, it can be connected even to Blu-ray players, set top boxes and AV receivers. Advanced HD audio transmission and sample rate conversion proves the compatibility with previous generation products whilst handling Dolby TrueHD and DTS-HD formats as well. DVI, HDMI and HDCP signals can be seamlessly integrated in any AV system using Lightware MX8x8HDMI-Pro.

All inputs are equalized and reclocked for up to 60 meter long DVI copper cable, and all outputs of the matrix router are reclocked for stable, jitter free signal transmission. The unit can be controlled either by the RS-232 port, the TCP/IP LAN connection or the built-in website.

Model Denomination

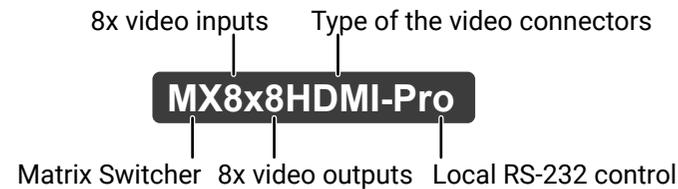

About the Serial Number

Lightware devices contain a label indicating the unique serial number of the product. The structure is the following:

Year of the manufacturing (3-9, A-Y):

 
 
7=2017, 8=2018, 9=2019, A=2020, etc...

7A000941 — 6-digit running sequence number

Month of the manufacturing (1-9, A-C):

1=January, 2=February, ..., C=December

1.2. Box Contents

	Supplied device	Supplied accessories		
	 Matrix switcher	 IEC power cable	 9-pole D-sub male to female cable	 Safety & warranty info, Quick Start Guide
MX8x8HDMI-Pro	✓	✓	✓	✓
MX8x8DVI-HDCP-Pro	✓	✓	✓	✓

1.3. Features of the Device



Advanced EDID Management

The user can emulate any EDID on the inputs independently, read out and store any attached monitor's EDID in 100 internal memory locations, upload and download EDID files using Lightware Device Controller software.



Pixel Accurate Reclocking

Each output has a clean, jitter free signal, eliminating signal instability and distortion caused by long cables or connector reflections.



Frame Detector and Signal Analysis

The exact video and audio signal format can be determined such as timing, frequencies, scan mode, HDCP encryption, color range, color space and audio sample rate.



Zero frame delay

No latency during input/output port switching.



HDCP-compliant

The matrix fulfills the HDCP standard. HDCP capability on the digital video inputs can be disabled when non-protected content is extended.



Non-blocking cross point matrix architecture

The router allows any input to be switched to any one or more outputs simultaneously.



Dolby TrueHD and DTS-HD audio

The matrix has Dolby TrueHD and DTS-HD audio support.



Supports all HDTV resolutions

720p, 1080i, 1080p 2K etc. HDTV signals of up to 225 MHz pixel clock frequency, regardless of the actual resolution passed through the router.



60 meter input cable compensation

Using 22AWG high quality DVI or HDMI cable, the inputs are automatically compensated for up to 60-meter cable length at 24bpp, which extends installation possibilities even at the highest HDTV or computer resolutions.



LCD menu control

Control the device locally using the navigation buttons and the 2 line high LCD menu.



RS-232 / RS-422 controlling

The unit can be controlled over serial data communication with standard RS-232 or RS-422.



Ethernet control

Multiple simultaneous TCP/IP connections are available with a simple ASCII-based protocol for controlling, configuring the matrix or performing a firmware update.



Color space and color range conversion

Video signals can be converted between RGB, YUV 4:4:4 and YUV 4:2:2 signals in all directions. Converting between limited and full range is also possible.



Deep Color support and conversion

It is possible to transmit the highest quality 30-bit or 36-bit video streams for perfect color reproduction. The signal can be converted freely on each output so you can get the best possible quality on every display.



DVI/HDMI conversion

The router is able to convert between DVI and HDMI signals so that you can watch HDMI videos on your computer display without audio.

2

Installation

The chapter is about the installation of the device and connecting to other appliances, presenting also the mounting options and further assembly steps.

- ▶ [MOUNTING](#)
- ▶ [CONNECTING STEPS](#)

2.1. Mounting


The housing of MX8x8HDMI-Pro series matrix contains built-in rack ears with mounting holes for the easy setup in rack-mount enclosures and any rack environment.



The matrix is 1U high rack sized.

ATTENTION! To ensure the correct ventilation and avoid overheating, leave enough free space around the appliance. Do not cover the appliance, leave the ventilation holes free on both sides.

2.2. Connecting Steps

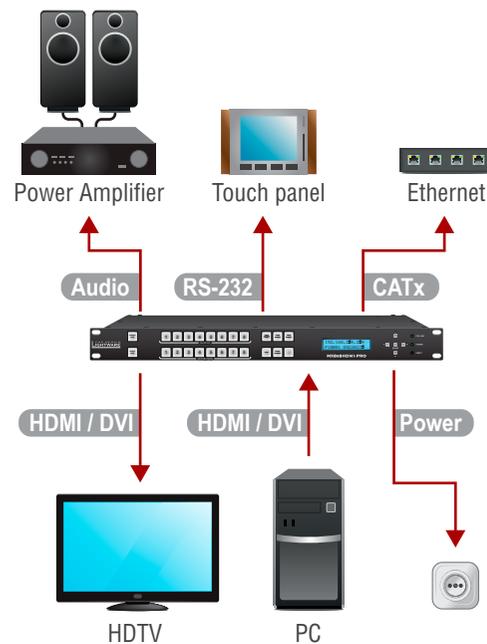

HDMI / DVI Connect an HDMI/DVI cable(s) between the source(s) to the input port(s) of the matrix.

HDMI / DVI Connect an HDMI/DVI cable(s) between the sink(s) and the output port(s) of the matrix.

Audio Optionally for S/PDIF audio extension: connect an audio cable(s) between the audio device (e.g. power amplifier) and the S/PDIF output port(s) or the matrix. *

RS-232 Optionally for serial extension: connect a controller device (e.g. touch panel) to the RS-232 port.

CATx Optionally connect the matrix to a LAN in order to control the device.

Power First connect the power cable to the AC input connector on the matrix, then to the AC power socket.

* Only the MX8x8HDMI-PRO model contains S/PDIF audio output ports.

3


Product Overview

The following sections are about the physical structure of the device, input/output ports and connectors

- ▶ [FRONT VIEW](#)
- ▶ [REAR VIEW](#)
- ▶ [ELECTRICAL CONNECTIONS](#)

3.1. Front View


MX8x8HDMI-Pro and MX8x8DVI-HDCP-Pro

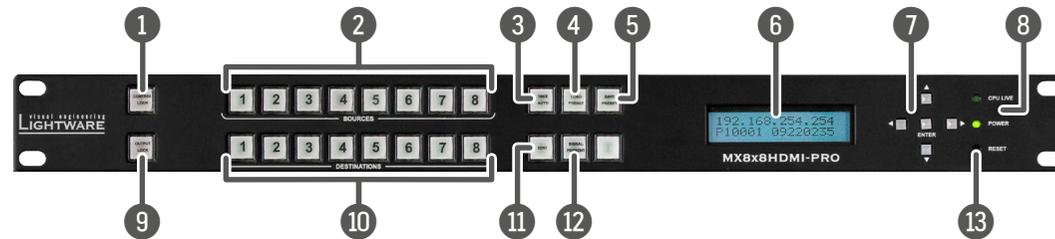

- 1 **Control Lock button** Locking the front panel operation. Button shines red when the function is enabled. For more details about this function, see the [Control Lock](#) section.
- 2 **Sources buttons** Input selector buttons have two functions: to select an output, or to view the selected output's state.
- 3 **Take / Autotake button** The button has two functions: displays the actual switching mode of the router (TAKE mode or AUTOTAKE mode) or executes switching in TAKE mode. For more details about these modes, see the [Take / Autotake Mode](#) section.
- 4 **Load Preset button** Loads and executes a previously saved preset; see the [Preset Operations](#) section.
- 5 **Save Preset button** Stores the crosspoint state of the matrix; see the [Preset Operations](#) section.
- 6 **LCD display** A 2x16-character LCD display for menu operations; see the [Front Panel LCD Menu Operation](#) section.
- 7 **Navigation buttons** UP, DOWN, LEFT, RIGHT, ENTER buttons for menu navigation.
- 8 **Status LEDs** The LEDs give feedback about the current status of the matrix.
 - CPU LIVE** **dark:** the device is not operational.
blinks: the device is in normal operation.
 - POWER** **dark:** the device is not powered.
lights: the device is powered on.
- 9 **Output Lock button** Locks and protects one (or more) outputs. It inhibits accidental input changing on protected outputs.
- 10 **Destinations buttons** The output selector buttons have two functions: to select an output, or to view the selected output's state.
- 11 **EDID button** Switches the LCD to the EDID menu allowing EDID switching, EDID saving, etc. For more details about this function, see the [EDID Mode](#) section.
- 12 **Signal Present button** Displays live sources and attached sinks on source and destination buttons.
- 13 **Reset button** Hardware reset button. It resets the whole router, but the saved settings, presets and EDIDs will be preserved.

3.2. Rear View

3.2.1. MX8x8HDMI-Pro

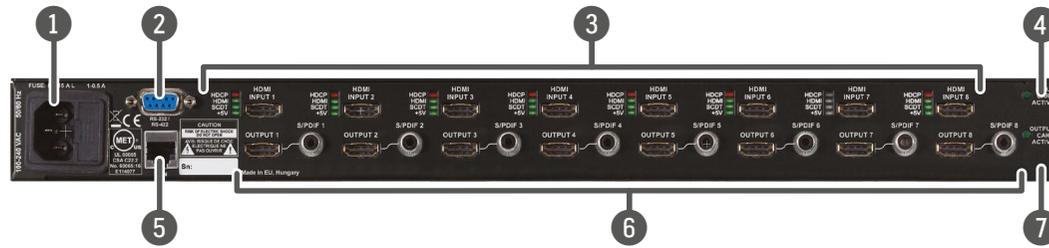

- 1 AC power connector** Standard IEC power connector. The router works with 100 to 240 Volts, 50 or 60 Hz power sources.
- 2 RS-232 connector** D-sub connector for the serial communication controlling the device.
- 3 Input ports and status LEDs** 8x HDMI 1.3 connectors for the sources and status LEDs for each input.
- 4 Input Card Active LED** The LED gives feedback about the current status of the input card.
- 5 LAN port** Standard RJ45 connector for Ethernet connection, controlling the device and performing firmware update.
- 6 Output ports** 8x HDMI 1.3 connectors and 8x S/PDIF audio output ports for each HDMI output.
- 7 Output Card Active LED** The LED gives feedback about the current status of the output card.

Input port status LEDs

HDCP LED

- off:** the input signal is not HDCP-encrypted.
- on:** the input signal is HDCP-encrypted.

HDMI LED

- off:** the input signal is DVI.
- on:** the input signal is HDMI.

+5V LED

- off:** the source is not connected or not powered.
- on:** the source is connected and powered.


Input and output card activity LEDs

- off:** the card is not active.
- on:** the card is active and operational.

SCDT LED (Signal Detected)

- off:** video signal is not detected.
- on:** valid video signal is detected and sync can be extracted.

3.2.2. MX8x8DVI-HDCP-Pro

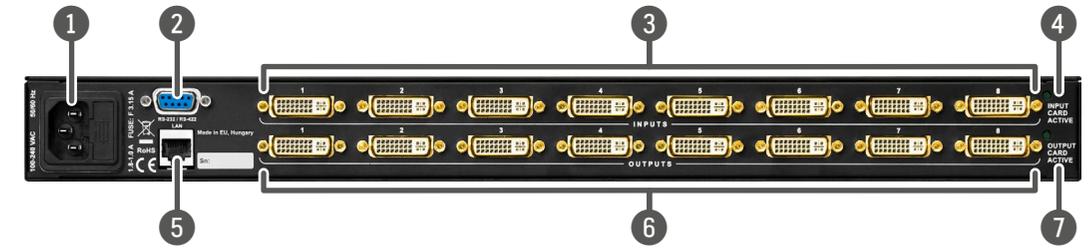

- 1 AC power connector** Standard IEC power connector. The router works with 100 to 240 Volts, 50 or 60 Hz power sources.
- 2 RS-232 connector** D-sub connector for the serial communication controlling the device.
- 3 Input ports** 8x DVI-I 1.0 connectors for the connection of the sources.
- 4 Input Card Active LED** The LED gives feedback about the current status of the input card.
- 5 LAN port** Standard RJ45 connector for Ethernet connection, controlling the device and performing firmware update.
- 6 Output ports** 8x DVI-I 1.0 connectors for connecting sinks.
- 7 Output Card Active LED** The LED gives feedback about the current status of the output card.

Input and output card activity LEDs

- off:** the card is not active.
- on:** the card is active and operational.

3.3. Electrical Connections

3.3.1. HDMI Connector

The MX8x8HDMI-PRO matrix provides 8x input and 8x output standard 19-pole HDMI connectors. Always use high quality HDMI cables for connecting sources and displays.



3.3.2. DVI-I Connector

The MX8x8DVI-HDCP-PRO contains 8x input and 8x output 29-pole DVI-I connectors. Users can plug in any DVI connector, but keep in mind that analog signals (such as VGA or RGBHV) are processed only on certain sinks. Always use high quality DVI cables for connecting sources and displays.



Fiber Cable Powering


As a special feature, Pro series matrix switchers provide 500 mA current on +5V output (pin 14 on DVI output connectors and pin 18 on HDMI output connectors) which is sufficient to supply power to fiber optical DVI cables. Standard DVI outputs or VGA cards only supply 55 mA current on +5V output, thus they are unable to directly power a fiber optical cable.

3.3.3. Ethernet Connector (LAN port)


The matrix switcher provides standard RJ45 connectors for LAN port. Always use high quality Ethernet cables.

Wiring LAN cables

Lightware recommends the termination of LAN cables on the basis of TIA/EIA T 568 A or TIA/EIA T 568 B standards.

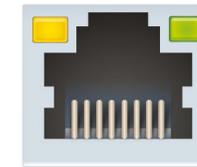

Pin	TIA/EIA T568A	TIA/EIA T568B
1	white/green	white/orange
2	green	orange
3	white/orange	white/green
4	blue	blue
5	white/blue	white/blue
6	orange	green
7	white/brown	white/brown
8	brown	brown

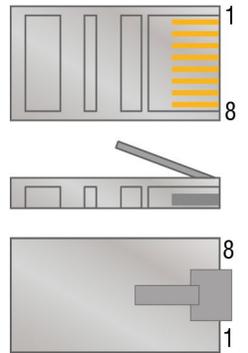

3.3.4. S/PDIF Connector

The MX8x8HDMI-PRO matrix provides standard RCA receptacles for digital coaxial audio outputs.



ATTENTION! Plugs and sockets on consumer equipment are conventionally color-coded by CEA/CEDIA-863-B (ANSI) to aid correct connections. According to the standard, Lightware uses orange colored RCA connectors for S/PDIF signals.

3.3.5. RS-232 Connector

The matrix contains an RS-232 port, which can be connected by an industry standard 9-pole D-sub female connector.



4

Operation

This chapter is about the powering and operating of the device and describing the functions available by the front/rear controls:

- ▶ [POWERING ON](#)
- ▶ [FRONT PANEL OPERATIONS](#)
- ▶ [FRONT PANEL LCD MENU OPERATION](#)
- ▶ [SOFTWARE CONTROL MODES](#)

4.1. Powering On

Connect the power cord to the device's IEC C14 standard power input connector. The router is immediately powered ON when the power cord is connected to the AC source (on Slim-matrices the power switch has to be in the 'ON' position). If the self-test is finished, the last configuration is reloaded and the appliance is ready to use.

INFO: After switching ON, the router reloads the latest settings that were used before it was turned off. The router has an internal emergency memory that stores all current settings and tie configurations. This memory is independent from presets and invisible for the user. This built-in feature helps the system be ready immediately in case of a power failure or accidental power down.

4.2. Front Panel Operations

4.2.1. Take / Autotake Mode

The router has two different switching modes: TAKE and AUTOTAKE. If the TAKE button is unlit, TAKE mode is active. When the TAKE button continuously shines green, AUTOTAKE mode is selected. Press and hold the TAKE button for two seconds to change between TAKE and AUTOTAKE modes.

4.2.1.1. Front panel controls in TAKE mode

Take mode allows the user to connect or disconnect multiple outputs to an input at once. This mode is useful when the time delay is not allowed between multiple switching. The commands are only realized when the TAKE button is pressed.



Switching operation

Step 1. First, press and release the desired **source button**. The pressed source button and all destination buttons that are currently connected to the source light up.



Step 2. Press and release the desired **destination buttons** that need to be (dis)connected to/from the selected source. The preselected destination buttons will blink.



Step 3. Press and release **Take** button; the selected input is switched to the selected output(s).



4.2.1.2. Front panel controls in AUTOTAKE mode

Autotake mode is useful when immediate actions must be done or fast switching is needed between sources on a particular destination. In this mode switching occurs immediately upon pressing one of the input selector buttons.



Switching operation

Step 1. Press and release the desired destination button. The pressed destination button and the currently connected source button light up green. If no source is connected (the output is muted), no source button will light up.



Step 2. Press and release the desired source button. The switch action will be executed immediately. Switching between sources to the selected destination can be done directly.



4.2.2. View Crosspoint State

The user can check the current switching status on the front panel using front panel buttons. View mode is slightly different in TAKE or AUTOTAKE modes because of different switching philosophy of the two modes.

INFO: View mode does not mean that the router has to be switched into a different mode, viewing and switching can be done after each other, without pressing any special buttons.

View current state in TAKE mode

If the router is in TAKE mode, the user can verify both input and output connections. In TAKE mode no accidental change can be done unless the TAKE button is pressed.

Press and release a **source button**. Now the selected source button and all destination buttons that are currently connected to the selected source will light up. This informative display will remain active for 5 seconds, then all buttons turn dark.



The sample drawing shows that Input 1 is currently connected to the Output 2, 3, and 5 ports.

If every source, destination and the TAKE button is unlit (the unit is in TAKE mode, and no input was selected in the last 5 seconds), press and release a **destination button** to see its current state.



Now the source button that is connected to the selected destination will light up. If no source button shines, the selected destination is in muted state. Upon pressing another destination button the last state of the destination can be seen.

The sample drawing shows that Output 3 is connected to the Input 1 port.

View current state in AUTOTAKE mode

In AUTOTAKE mode only states of the destinations can be viewed.

Press and release the desired **destination button**.



Now the source button that is connected to the selected destination will light up. If no source button shines, the selected destination is in muted state. Upon pressing another destination button, the last state of the destination can be seen.

4.2.3. View Live Inputs and Attached Sinks

Step 1. Press and release the **Signal Present** button.



Step 2. Input buttons will light up indicating that active TMDS clock signal is present on the respective input connectors. Output buttons will also light up indicating that a powered monitor is attached to the output. The output circuit senses TMDS pull-up resistors on the monitor side.

Step 3. Press and release the **Signal Present** button to quit this mode.

The sample drawing shows that the current live inputs are 1 and 3, the current live output is 8.

4.2.4. Preset Operations

4.2.4.1. Save or Load Presets

The unit has 32 user programmable presets. Each preset stores a configuration regarding all input connections for all outputs. All presets are stored in a non-volatile memory. The router keeps presets even in case of power down. Memory numbers are assigned to source buttons.



Saving a Preset in TAKE mode

Step 1. Press and release the **Save Preset** button.



Step 2. Press and release the desired **source (memory address) button** (source 1 to 8).



Step 3. Press and release the **Take** button. Now the current configuration is stored in the selected memory.



ATTENTION! The preset save action always stores the current configuration for **all outputs**.

Loading a Preset in TAKE mode

Step 1. Press and release the **Load preset** button.



Step 2. Press and release the desired **source (memory address) button** (source 1 to 8).



Step 3. Press and release the **Take** button. Now the selected preset is loaded.



ATTENTION! Loading a preset always modifies **all output states**.

Saving a Preset in AUTOTAKE mode

Step 1. Press and release the **Save Preset** button.



Step 2. Press and release the desired **source (memory address) button** (source 1 to 8). Now the current configuration is stored in the selected memory.



ATTENTION! The preset save action always stores the current configuration for **all outputs**.

Loading a Preset in AUTOTAKE mode

Step 1. Press and release the **Load Preset** button.



Step 2. Press and release the desired **source (memory address)** button (source 1 to 8). Now the selected preset is loaded.



ATTENTION! Loading a preset always modifies **all output states**.

4.2.5. Output Lock

Using Lightware routers, it is possible to lock a destination. This feature prevents an accidental switching to the locked destination in case of an important signal. Locking a destination means that no input selection or muting action can be executed on that particular destination.



Destinations can independently be locked or unlocked. Locking a destination does not affect other destinations.

Output lock in Take mode

Step 1. Press and release the **Output Lock** button; it starts to blink and all the buttons of any locked destinations light up (view state).



Step 2. Press and release a **destination button**; it starts to blink (more destinations can be selected sequentially).



Step 3. Press and release the **Take** button. The selected destinations are now locked.



Output lock in Autotake mode

Step 1. Press and release the required **destination** button. Now the selected destination button and the currently configured source button light up (view mode).



Step 2. Press and release the **Output Lock** button; it lights up in red, and lock function is activated at once. No source can be changed at the locked destination.



4.2.6. Control Lock

Front panel button operation can be enabled or disabled using the **Control Lock** button, while RS-232 control is still enabled. If the button is unlit, front panel button operation is enabled. If it continuously shines red, then front panel operations are inhibited.



Press and release the **Control Lock** button to toggle between the control lock states.

4.2.7. IP Settings


The Ethernet port can be configured on the front panel LCD menu or remotely through the Controller software or the built-in website.

The factory default IP settings or DHCP mode can be activated quickly through the front panel shortcut buttons. To reset the IP configuration, perform the following:

Resetting the IP address

Reset to factory default IP configuration or to DHCP mode with front panel buttons.


Step 1. Switch the router to TAKE mode if used previously in AUTOTAKE mode by pressing **TAKE** button for 3 seconds (light will go off).

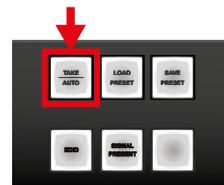

Step 2. Press the **Control Lock** button (Control Lock button shines red continuously).




Step 3. Press and keep pressing the **Output Lock** button (the current protocol indication will light up).

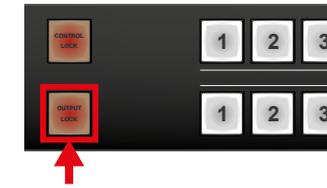

Step 4. Press and release the

a) **Load Preset** button to set the factory default IP settings:

IP address: 192.168.254.254
 port number: 10001
 subnet mask: 255.255.0.0
 gateway: 192.168.0.1

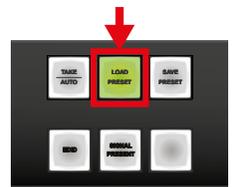

b) **Save Preset** button to set DHCP enabled:

IP address: Acquired with DHCP
 port number: unchanged
 subnet mask: Get from DHCP server
 gateway: Get from DHCP server



Step 5. A light sequence will occur to confirm the command. (Take/Auto, Load Preset and Save Preset buttons will light up one after the other)

Step 6. Wait about 5 seconds before connecting the router via Ethernet.

4.2.8. Control Protocols


Matrix routers can be controlled with multiple control protocols. Lightware routers have a special protocol, but to interoperate with third-party devices, a secondary protocol is also provided.

ATTENTION! The Lightware Device Controller software and the built-in website works only with LW protocol (#1)!

The currently used protocol can be viewed or changed anytime on the matrix front panel or with protocol commands.

Change (view) protocol on the front panel


Step 1. Switch the router to TAKE mode if used previously in AUTOTAKE mode by pressing the **TAKE** button for 3 seconds. (light will go off).

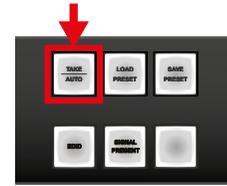

Step 2. Press the **Control Lock** button for 3 seconds (it shines red continuously).



Step 3. Press and keep pressing the **Output Lock** button. Now the active protocols for the Serial and the Ethernet ports are displayed (view protocol):

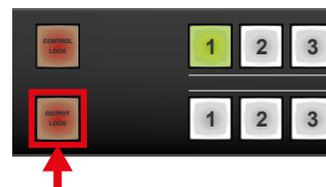

One **source button** lights up according to the current protocol on the **Serial port** and the **Ethernet port**:

- Source#1 lights: Lightware protocol active.
- Source#2 lights: Protocol#2 is active.

Step 4.

- a) If you do not want to change the protocol, release the Output Lock button (view only).
- b) If you want to change the protocol on any interface, keep the Output Lock button pressed, and press the desired Source button according to the new protocol for that specific interface.

Step 5. If the control protocol for any interface has changed, a beep will sound to signal the change.

Change (view) protocol via remote connection

Connect to the matrix through any control interface, then use the commands described in the [Programmers' Reference](#) chapter.

4.3. Front Panel LCD Menu Operation

4.3.1. Menu concept

There are three operation modes of the LCD menu:

Normal mode	Most settings can be done in this mode. It activates after powering on.
EDID mode	Use this mode to set up the emulated EDID on the inputs, learn EDID form the outputs or to view the EDID memory. This mode is activated when the EDID button is illuminated. You can enter this mode or exit it by pressing the EDID button.
Signal Present mode	This mode is for checking the presence of the display devices and incoming signals. It is activated when the Signal Present button is illuminated. You can enter this mode or exit it by pressing the Signal Present button.

Press the **Left** or the **Right** button to jump between the menus and parameters. Use the **Enter** or **Take** button to enter a menu or execute an item. The **Up** and **Down** buttons modify the values if modification is enabled.

Normal mode

- Default display
- IP settings
 - IP address
 - IP port
 - IP subnet
 - Save & exit
 - Exit no save
- Power status
- Selftest
- Error list
- Installed cards
- Firmware versions
- Factory resets
 - IP reset
 - IO card reset
 - HDCP KEY reset
 - Disable HDCP on all inputs
 - Enable HDCP on all inputs
 - EDID reset

EDID mode

- EDID view
- EDID save
- EDID switch

Signal present mode

4.3.2. Normal Mode

The normal mode has eight submenus that can be selected by pressing the **Left** and **Right** buttons.

Default display

The default display activates after powering up or after 10 idle seconds from any menu in normal mode. This screen shows the current IP address, the IP port and the serial number of the matrix.

```
192.168.003.219
P10001 33004291
```

IP settings

Network related settings can be found in this menu. You can enter a submenu by pressing **Enter**, or change attributes and parameters by pressing the **Up** and **Down** buttons.

IP address

It is possible to configure the system to use a DHCP server by selecting DHCP instead of fixIP, and can set the IP address in case of fix IP mode.

```
IP ADDR  FixIP
192.168.000.104
```

IP port

User can set the IP mode and check the MAC address of the device.

```
IP PORT  10001
MAC:0080A391CE94
```

IP subnet mask

User can change the IP subnet mask of the device.

```
IP SUBNET
255.255.000.000
```

IP gateway address

User can change the IP gateway address of the device. After the desired modification, you have to press **Enter** again and select the **Save & Exit** item in the menu, then the new settings will be activated after a few seconds. If you select the **Exit no save** item, then no modifications will be made.

```
IP GATEWAY
192.168.000.001
```

ATTENTION! New settings cannot be applied while an active connection is alive on the Ethernet port. If you get an „OPERATION FAILED” message, please disconnect the remote TCP/IP sockets and try again.

Power status

You are able to check the DC voltages and the internal temperature in this menu. If these values are out of the safe interval, you will get a warning message on the LCD screen regardless of what menu is selected.

```
PWR STATUS:  FRA
3.3V 5.0V 24C
```

Selftest

You can run selftest in the system from this menu. There are three components in the test: I/O ports, memory and I2C devices.

```
SELFTEST    CPU
STOPPED
```

Error list

You can read out the error messages of the frame stored in the device memory in this menu.

```
ELIST:CPU
List is Empty!
```

Installed cards (Card ID slots)

This submenu shows the hardware description strings of the installed cards. You can view the installed cards by pressing the **Up** and **Down** buttons. The position is shown in the top right corner. The possible values are:

- **MB**: Motherboard,
- **I1**: Input card slot,
- **O1**: Output card slot.

```
CARD ID SLOT# MB
MX-DVI-MB8 SCH_1
```

Firmware versions

It shows the firmware version numbers of the CPU, EDID, web server, web content and the front panel control board. Press the **Up** and **Down** buttons to view the desired firmware.

```
Firmwares:  CPU
Ver:2.5.0
```

Factory resets

Here you are able to recover the original factory settings if something went wrong. There are more factory reset options that you can select:

```
Factory resets..
```

IP reset	It resets the IP settings to factory default, see in the Factory Default Settings section.
IO card reset	Resets all settings related to the IO cards except the EDID routings.
HDCP key reset	Resets the internal HDCP key cache. It is useful when a source device fails because of too many downstream connections.
Disable HDCP on all inputs	Disables HDCP controls on all input ports.
Enable HDCP on all inputs	Enables HDCP controls on all input ports.
EDID resets	Resets the EDID on all input ports to factory default, see in the Factory Default Settings section.

4.3.3. EDID Mode

EDID mode is active when the EDID button is illuminated on the front panel. To enter or to exit from this mode, press and release the **EDID** button. There are three submenus in this mode, use the **Right**, **Left** and **Enter** buttons to reach them.

EDID view

You can select an EDID with the **Up** and **Down** buttons and view its short name. The short name contains the three-character long manufacturer code (so-called 'PNPID'), the resolution and frame rate of the preferred timing, detailed timing and the model name descriptor string. The following EDIDs can be selected:

```
EDID VIEW  0 1
SAM1920x1080@60.
```

O1 - O8	The EDID of the currently attached or the last attached sink device.
I1 - I8	The emulated EDIDs of the input ports.
M1 - M50	The stored Lightware EDIDs
M51-M99	49 user programmable memory slots.

EDID save

Lightware matrices have 49 user programmable EDID memory slots. You can learn and save an EDID from any output to one of the M51-M100 memory slots. You have to select the **desired output** and the **desired destination**, then press **Enter**. The EDIDs are stored in the non-volatile emergency memory. By default all user programmable memory slots are empty.

```
EDID SAV 0 1>M51
SAM1920x1080@60.
```

Press the **EDID** button to exit.

EDID switch

This menu is used to select the emulated EDIDs on the inputs. You have to specify the **EDID source** and the **desired input port**, then press **Enter**.

```
EDID SW  0 2>I 1
LWR800x600@50.0H
```

If you select an output port as a source, then dynamic routing will be performed: the input will follow the changes of the output port. If there is no connected device on the selected output, then the EDID of the last attached sink will be emulated.

Press the **EDID** button to exit this menu.

4.3.4. Signal Present Mode

Signal present mode is active when the **Signal present** button is illuminated. To enter or exit from Signal present mode you have to press this button.

```
I1I2I3I4I5I6I7I8
I1I2I3I4I5I6I7I8
```

The LCD screen shows the current connections between the inputs and outputs. The second line represents the output and the first line represents the connected inputs.

If you are in Signal Present mode, the source and destination buttons show the actual state of the matrix. If a source button is illuminated, then SCDT is present on that source. If a destination button is illuminated, then a powered display is attached to this output (Hot Plug Detect signal is present). You can quickly check the cable connections with this feature.

4.4. Software Control Modes

The user has more possibilities to control the device besides the front panel buttons. The following list contains the software control modes:

- **Built-in website** - you can connect and control to the device via the built-in website using Ethernet interface. For the details, see the [Software Control – Using the Built-in Web](#) chapter.
- **Lightware Device Controller (LDC)** - you can connect to the device via our control software using RS-232 or Ethernet interfaces and control or configure the device as you wish. For the details, see the [Software Control - Lightware Device Controller](#) chapter.
- **Protocol commands:** you can configure the device with reduced command set with our built-in command protocol LW2. For more details, see the [Programmers' Reference](#) chapter.

5

Software Control – Using the Built-in Web

The MX8x8HDMI-Pro series matrix has a feature that allows to connect and control the matrix through a web browser. The controlling features are not so wide as in the case of Lightware Device Controller (LDC), but numerous information is displayed and many settings are available. The router's built-in website is compatible with the most common browsers and requires no additional software components.

- ▶ [ESTABLISHING THE CONNECTION](#)
- ▶ [THE LAYOUT OF THE BUILT-IN WEB](#)

5.1. Establishing the Connection

ATTENTION! Only one web page is allowed to open simultaneously to the same matrix. Other TCP/IP connections are prohibited while the web page is open.

ATTENTION! If the connection is made through the router's Ethernet port, be sure that the computer is in the same network as the router. If the computer has multiple Ethernet connections (e.g. Wi-Fi and LAN connections are used simultaneously), you will have to know the IP address for the one that is used for controlling the matrix.

Step 1. Connect the matrix and the computer either via


- Ethernet, with LAN patch cable (to a Hub/Switch/Router), or
- Ethernet, with LAN cross cable (directly to Computer).

Step 2. Change to the desired IP settings if it is needed.

Step 3. Type the IP address to the address bar and press enter (factory default address is 192.168.254.254).

5.2. The Layout of the Built-in Web

The built-in web page allows almost the same controlling functions that are available via the LDC.

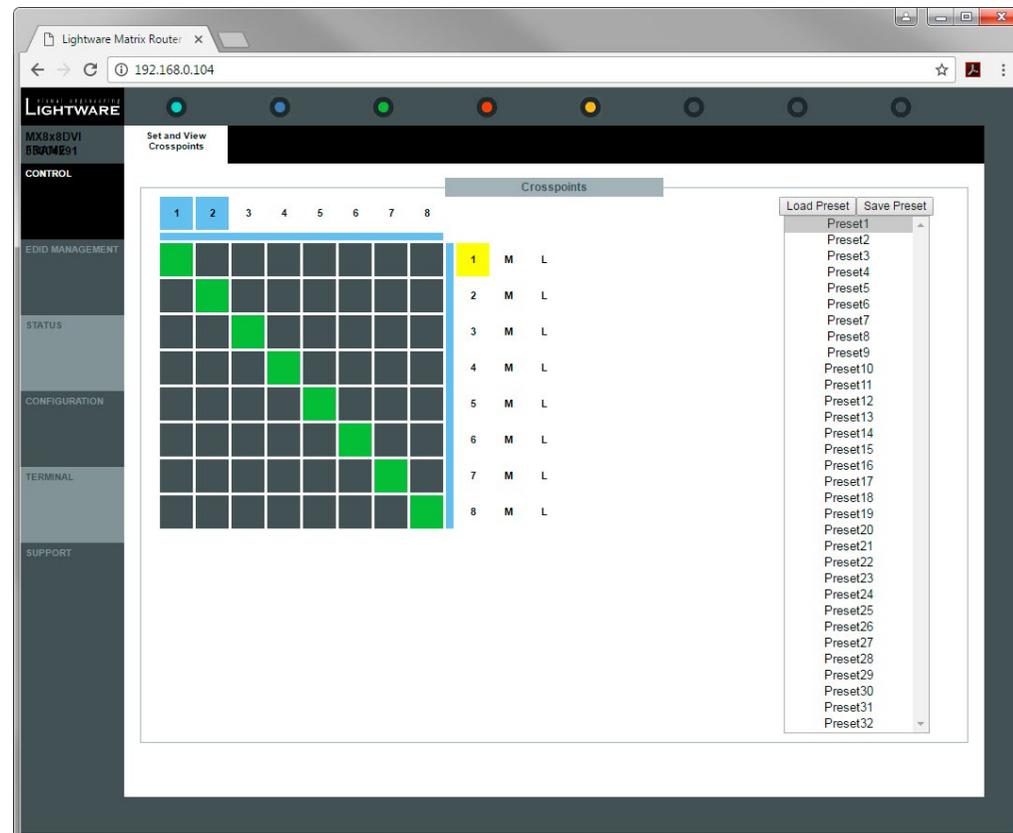

Built-in web page displaying the Crosspoint menu

6

Software Control - Lightware Device Controller

The device can be controlled by a computer through the RS-232 and Ethernet port using Lightware Device Controller (LDC). The software can be installed on a Windows PC or Mac OS. The application and the User's manual can be downloaded from www.lightware.com. The Windows and the Mac versions have the same look and functionality.

- ▶ [INSTALL AND UPDATE](#)
- ▶ [RUNNING THE LDC](#)
- ▶ [CONNECTING TO A DEVICE \(DEVICE DISCOVERY WINDOW\)](#)
- ▶ [THE CROSSPOINT MENU](#)
- ▶ [TILE VIEW](#)
- ▶ [EDID MENU](#)
- ▶ [SETTINGS MENU](#)
- ▶ [TERMINAL WINDOW](#)

6.1. Install and Update

INFO: After the installation, the Windows and the Mac applications have the same look and functionality. This type of the installer is equal to the Normal install in case of Windows and results in an updateable version with the same attributes.

Minimum System Requirement

RAM: 1 GB

Minimum display resolution: 1280x720

Installation for Windows OS

Run the installer. If the User Account Control drops a pop-up message, click **Yes**.

During the installation you will be prompted to select the type of the installation: **normal** and the **snapshot** install:

Normal install	Snapshot install
Available for Windows and macOS	Available for Windows
The installer can update only this instance	Cannot be updated
Only one updateable instance can exist for all users	More than one different version can be installed for all users

Comparison of installation types

ATTENTION! Using the Normal install as the default choice is highly recommended.

Installation for macOS

Mount the DMG file by double clicking on it, and drag the LDC icon over the Applications icon to copy the program into the Applications folder. If you want to copy the LDC into another location, just drag the icon over the desired folder.

ATTENTION! Please check the firewall settings on the macOS device. LDC needs to be added to the exceptions of the blocked software for the proper operation.

Updating of LDC

Step 1. Run the application.

The **Device Discovery** window appears automatically, and the program checks the available updates on Lightware's website and opens the update window if the LDC found updates.

The current and the update version number can be seen at the top of the window and they are shown in this window even with the snapshot install.

The **Update** window can also be opened by clicking on the **About**  icon and the **Update** button.

Step 2. Set the desired update setting in the **Options** section.

- If you do not want to check for updates automatically, uncheck the **circle** that contains the green tick.
- If you want to postpone the update, a reminder can be set with different delays from the **drop down list**.
- If the proxy settings traverse the update process, set the proper values, then click on the **OK** button.

Step 3. Click on the **Download update** button to start the updating.

The updates can be checked manually by clicking on the **Check now** button.

6.2. Running the LDC

The common way to start the software is to double-click on the LDC icon. But the LDC can be run by command line parameters as follows:

Connecting to a Device with Static IP Address

The LDC is connected to a device with the indicated static IP address directly; the Device Discovery window is not displayed. When the port number is not set, the default port is used: 10001 (LW1 protocol).

Format: `LightwareDeviceController -i <IP_address>:<port>`

Example: `LightwareDeviceController -i 192.168.0.20:6107`

Connecting to a Device via a Serial Port

Format: `LightwareDeviceController -c <COM_port>:<Baud>`

Example: `LightwareDeviceController -c COM1:57600`

The LDC is connected to a device with the indicated COM port directly; the Device Discovery window is not displayed. If no Baud rate is set, the application will detect it automatically.


Adjusting the Zoom

The window can be zoomed to a specific value to fit to the resolution of the desktop (higher/lower). '1' is the default value (100%).


Format: `LightwareDeviceController -z <magnifying_value>`

Example: `LightwareDeviceController -z 1.2`

ATTENTION! The last set value is stored and applied when LDC is started without a parameter.

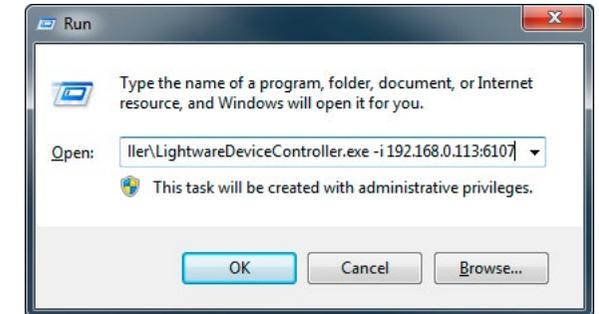

6.3. Connecting to a Device (Device Discovery Window)

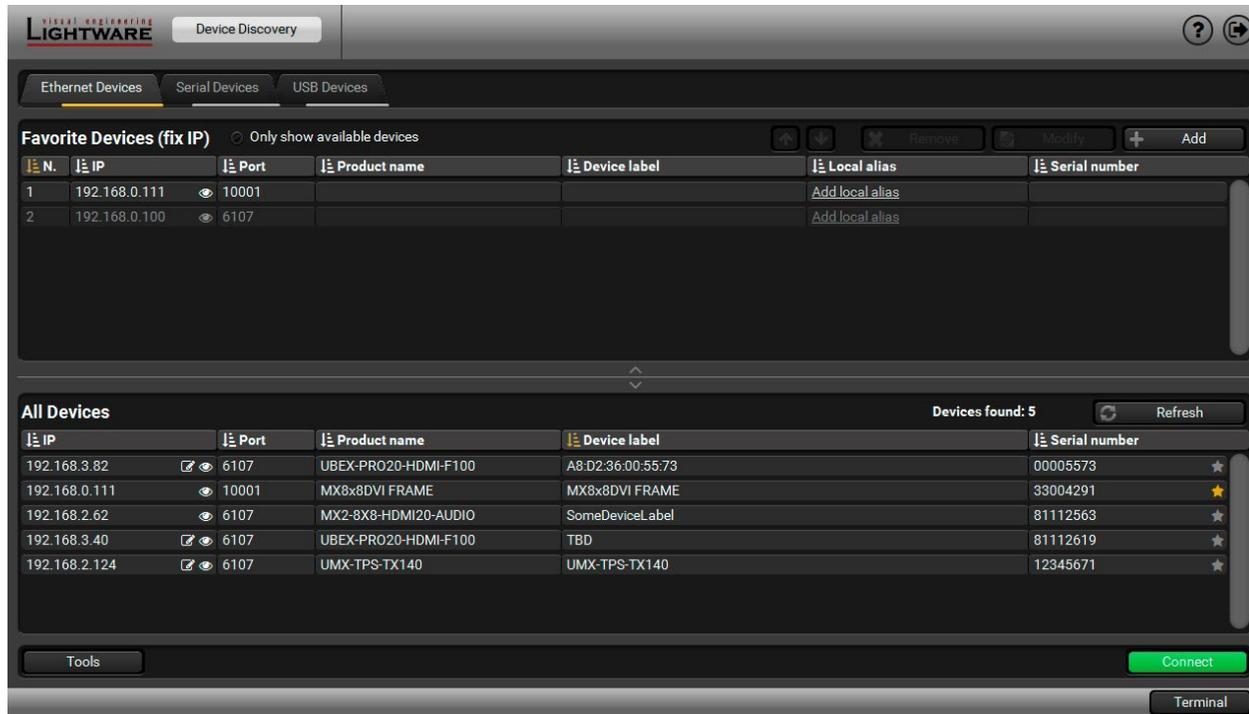

The Device Discovery Window

There are three tabs for the different types of interfaces: Ethernet, Serial, and USB.


The Ethernet tab consists of two lists:

- **Favorite devices:** You can add any Lightware device that is connected via Ethernet, there is no need to browse all the available devices.
- **All devices:** The Lightware devices are listed that are available in the network.

Further Tools

The Tools menu contains the following options:


- **Log viewer:** The tool can be used for reviewing previously saved log files.
- **Create EDID:** This tool opens the Easy EDID Creator wizard, which can be used for creating unique EDIDs in a few simple steps. Functionality is the same as that of the Easy EDID Creator, for the detailed information, see the [Creating an EDID](#) section.
- **Demo mode:** This is a virtual MX-FR17 matrix router with full functionality built into the LDC. Functions and options are the same as that of a real MX-FR17 device.

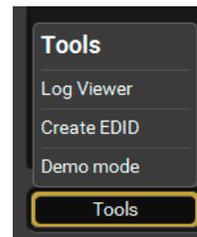

The Terminal window is also available by pressing its button on the bottom.

Establishing the Connection

Select the unit from the discovered Ethernet devices (see the picture on the right); if the device is connected via the RS-232 port, click on the **Query** button next to the desired serial port to display the device's name and serial number (see the picture below). Double click on the device or select it and click on the green **Connect** button.

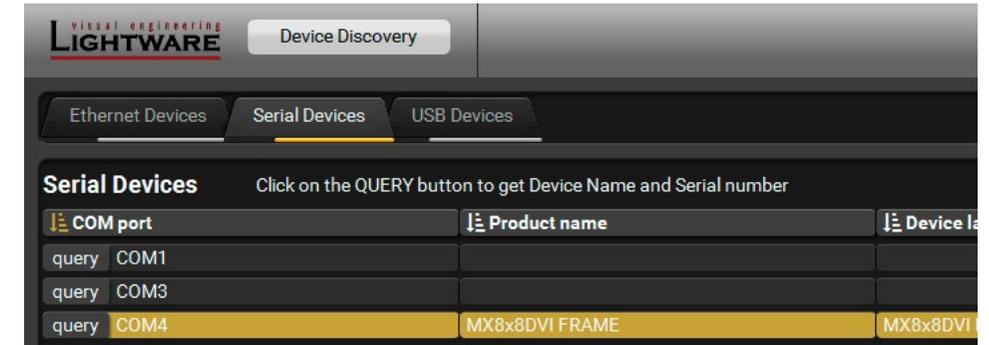


ATTENTION! When the device is connected via the local RS-232 port, make sure that LW protocol (#1) is set on the serial port. The protocol settings are available by the front panel buttons, see the [Control Protocols](#) section.

6.4. The Crosspoint Menu

6.4.1. Grid View

Grid view is a user-friendly graphical interface displaying the crosspoint state of the matrix router. This is an easy way to change between the input sources and output sinks.

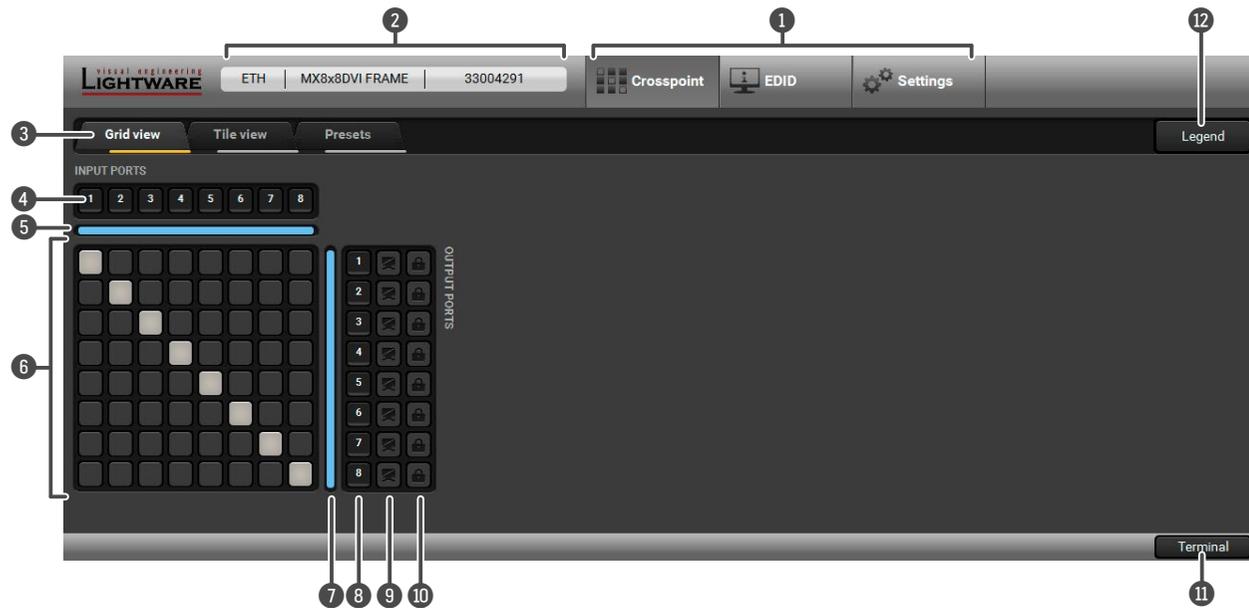

Grid View in the Crosspoint Menu

- 1 **Main Menu** The available menu items are displayed. The active one is highlighted with a dark grey background color.
- 2 **Information Ribbon** This label shows the interface type, the name and the serial number of the connected device. If the device has more than one interface, the ribbon shows only the one that made the connection. Click on the ribbon to open the device discovery window.
- 3 **Tab Selector Ribbon** The crosspoint and the settings menu contain more than one tab. Click on the desired one to select it. The yellow line shows which tab is the active one.
- 4 **Input Ports** Each number represents an input port. If the window size does not allow to display all the ports, pages can be turned with the left and right arrow buttons of the navigator.
- 5 **Input Board** The color of the line shows what kind of input board is installed (HDMI).
- 6 **Connections** The dark grey square means the port is not available. The light grey square means the port is available but there is no connection. The white square means there is a connection between the input and the output port.
- 7 **Output Board** The color of the line shows what kind of output board is installed (HDMI).
- 8 **Output Ports** Each number represents an output port. If the window size does not allow to display all the ports, pages can be turned with the up and down arrow buttons of the navigator.
- 9 **Mute Buttons** Outputs can be easily muted by clicking on the mute button.
- 10 **Lock Buttons** To prevent unwanted switching, outputs can be locked to any input.
- 11 **Terminal** This general-purpose terminal is created mainly for testing and debugging purposes. For more information, see the [Terminal Window](#) section.
- 12 **Legend Button** Opens the Legend panel, displaying the meaning of the applied symbols and colors of the Grid view.

6.4.1.1. The Legend Window

The meaning of the symbols and applied colors in the Grid view are described in this window:

Legend - Ports

Port is unmuted	Port is muted
Port is unlocked	Port is locked

Port number — 1
Port status —

1 Not connected
1 Connected, no signal
1 Analog signal
1 DVI signal
1 HDMI signal

Legend - Cards

Empty slot or unknown card	DVI card
DVII or UMX card	DVI dual-link card
DVI-HDCP, HDMI or HDMI-3D card	HDMI TP card
Optical DVI or HDMI card	DVI TP card
TPS card	TPS2-HDMI card
3GSDI card	Audio only card

The Legend Window

6.4.1.2. Crosspoint Operations

Switching

 
To make connection, click on the desired square. If there is no connection between the desired input and output (the square is dark grey), the mouse pointer becomes a hand (link pointer) before clicking. If the output port is not locked, the connection is made, the square becomes white and the cursor changes back to a pointer.



For example, Input 8 is not connected to Output 2 according to the first picture below. After the connection is established, the square becomes light grey.

Muting the Outputs


Outputs can be easily muted by clicking on the button with a crossed monitor beside the output. This means that no signal is present at this output. If muting is active, the color of the button's background changes to white.



INFO: Inputs can be disconnected from any outputs (by a protocol command). In this case, the crosspoint view will not show any white squares for the disconnected output, and the output will have no signal, just like when muted. Click on a crosspoint square to connect the output again to an input.

Locking the Outputs

 
Outputs can be locked to any input. After locking an output to an input, no switching is permitted to this output unless it is unlocked again. If output lock is active, the color of the button's background changes to white.



INFO: Loading a preset does not change either the lock state nor the switch state of a locked output. If an output is locked to an input before preset loading, it will also be locked to that input after preset loading, so locked outputs ignore the preset.

6.5. Tile View

The tile view is to display the input and output ports by tiles. Each tile means an input or output port and additionally shows the most important port and signal information. Thus, the user can check the status of many ports at the same time without clicking on a port or opening the port settings window.


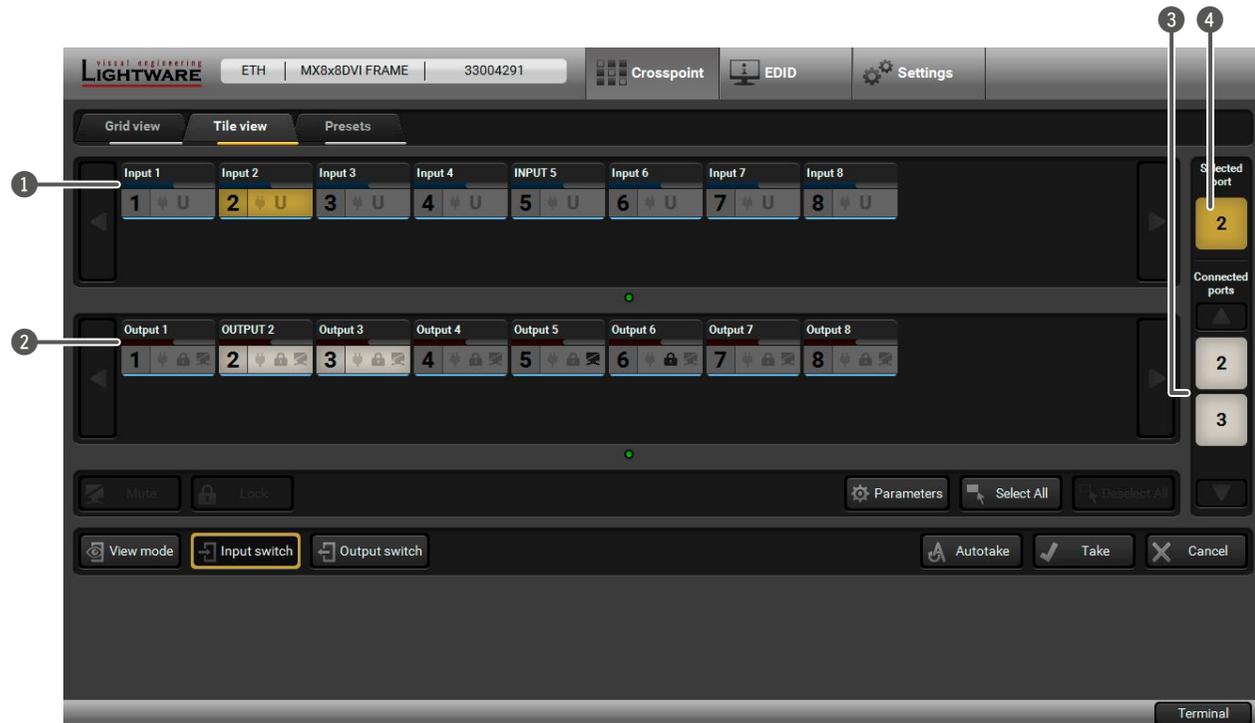


Tile View in the Crosspoint Menu

Legend


- ① **Input Ports** Each tile represents an input port. If the window size does not display all the ports, pages can be turned with the left and right arrow buttons.
- ② **Output Ports** Each tile represents an output port. If window size does not display all the ports, pages can be turned with the left and right arrow buttons.
- ③ **Connected Port(s)** The ports are listed (with white background) on the port bar that are connected to the Selected port.
- ④ **Selected Port** The last selected port is displayed with a yellow background on the port bar. Press the button to open the port settings window.

  Control Buttons

-  **Mute** Muting or unmuting the selected output port(s)
-  **Lock** Locking or unlocking the selected output port(s)
-  **View mode** Selecting the View mode
-  **Input switch** Selecting the Input switch mode
-  **Output switch** Selecting the Output switch mode
-  **Parameters** Displaying the port settings window
-  **Select All** Selecting all ports (only in output switch mode)
-  **Deselect All** Deselecting all ports (only in output switch mode)
-  **Autotake** Toggling the Autotake mode ON/OFF
-  **Take** Executing the crosspoint changes in Take mode


6.5.1. Port Tiles

The colors of the port tiles and the displayed icons represent different states and information:

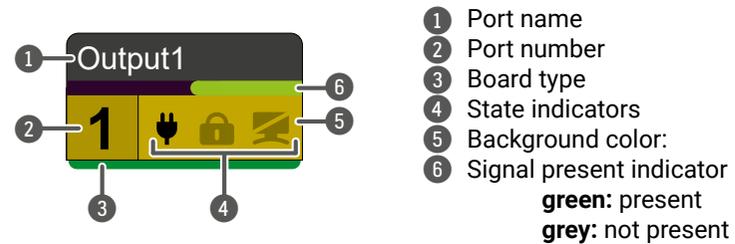

Background Colors (Port State)

The colors of the port tiles represent different states of the port as follows:

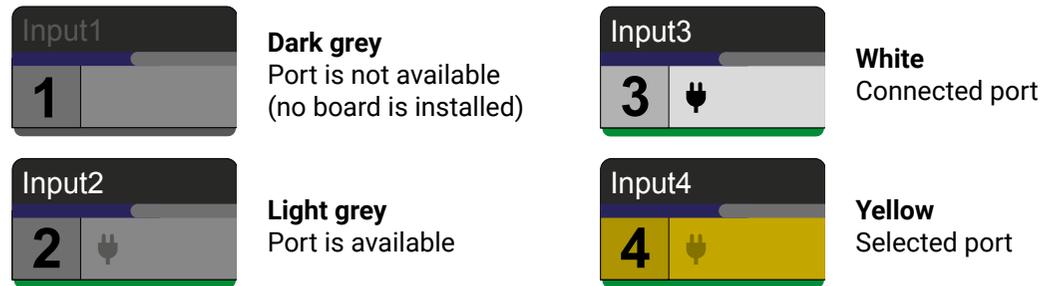

State Indicators

Icon	Icon is not displayed	Icon is grey	Icon is black
	No information is available about the connection status	Port is available but inactive	Output ports: Port is available and sink is connected (hotplug detected) Input ports: Port is available and source is connected (power +5V detected)
	-	Port is unmuted	Port is muted
	-	Port is unlocked	Port is locked

Port Parameters

Select the desired port and press the **Parameters** button; a window pops up where the current port name can be set.

TIPS AND TRICKS: The parameters window can be also opened by selecting the desired port and click on its button on the port bar.

6.5.2. Display Modes

View Mode

The mode allows to display the current crosspoint-state. The crosspoint cannot be changed in this mode, but port settings are available.



 
Input Switch Mode

The mode can also be named as **Input priority-mode**: an input port has to be selected at first, then the connected output port(s) is/are shown. Thus, the output port(s) connected to the input port can be changed.



Output Switch Mode

This mode can also be named as **Output priority-mode**: an output port has to be selected at first, then the connected input port is shown. Thus, the output port connected to the input port can be changed. Output ports can be (un)locked, (un)muted only in Output switch mode.



6.5.3. Crosspoint Operations

Switching in Take Mode

The black outlined **Autotake** button means this mode is active. Any crosspoint change – (dis)connecting ports to/from the previously selected port – is executed only after pressing the **Take** button. The following steps describe the process of the switching:



- Step 1.** Press the desired **Input switch** or **Output switch** button to select the switching mode.
- Step 2.** Select the desired **port**; it will be highlighted in yellow and displayed on the port bar on the right, too.
- Step 3.** Connected port(s) is/are highlighted in white and displayed on the port bar on the right, too.
- Step 4.** Create the desired **crosspoint settings** by (de)selecting the ports; they will start to blink.
- Step 5.** Press the **Take** button to execute changes or **Cancel** to ignore the operations.

INFO: Take mode remains active until it is switched off. Selecting another view mode or menu does not change the Take/Autotake mode state.

Switching in Autotake Mode

The yellow outlined **Autotake** button means this mode is active. Any crosspoint change – (dis)connecting ports to/from the previously selected port – is executed immediately after pressing the port button. The following steps describe the process of the switching:



- Step 1.** Press the desired **Input switch** or **Output switch** button to select the switching mode.
- Step 2.** Select the desired **port**; it will be highlighted and displayed on the port bar on the right, too.
- Step 3.** The connected ports are highlighted in white and displayed on the port bar on the right, too.
- Step 4.** Create the desired crosspoint settings by (de)selecting the ports; the changes are executed immediately.

INFO: Autotake mode remains active until it is switched off. Selecting another view mode or menu does not change the Take/Autotake mode state.

6.5.4. Port Properties and Settings

Output port properties window

Click on the number of the desired port in case of grid view or on the headline of the port in case of tile view to open the port properties window. Audio and video signal status information and the most important parameters are displayed. HDMI/DVI modes, colorspace, color range, LPCM subsample, and HDCP settings are available from this menu.

The screenshot shows the 'Output port properties window' with the following sections:

- Apply changes to:** Current output All outputs
- Reload factory defaults to:**
- Rename port to:**
- Set Signal Properties**
 - Mode:
 - Colorspace:
 - Color range:
 - LPCM subsample:
 - HDCP:
- Display**
 - HDMI capable: Yes
 - HDCP capable: Yes
 - HDCP repeater: No
 - Audio capabilities: Yes
 - Supported colorspaces: RGB YUV 4:4:4 YUV 4:2:2
 - Supported PCM frequencies: 32 44 48 kHz
 - Display manufacturer: Samsung Electric Company
 - Display type: T24B301
 - Display resolution: 1920x1080@60.0Hz
 - Deep Color support: 30 bit 36 bit
 - YUV support on DC: Yes
- General**
 - Monitor present (Receiver sense): Present
 - Output signal (HDMI/DVI): HDMI
 - Active signal: Present
 - HDCP: None
 - HotPlug Detect: Present
- Audio Signal Info**
 - Format: PCM
 - Sampling frequency: 48 kHz
 - Channels: 2 ch
- Video Signal Info**
 - Resolution: 1680x1050p60
 - Scan: Progressive
 - Colorspace: RGB
 - Vsync: 60 Hz
 - Hsync: 64.9 kHz
 - Vertical sync polarity: Positive
 - Horizontal sync polarity: Negative
 - Pixel clock stable: PLL locked
 - Pixel repetitions: No repetition
 - Aspect ratio: Unknown
 - Dimension: 2D video

You can customize the name of the port via the **Rename** button. Factory default settings for the current output or all outputs can be recalled by selecting the **Current output** and **All outputs** buttons.


Input port properties window

Click on the number of the desired port in case of grid view, or on the headline of the port in case of tile view to open the port properties window. Signal status information and the most important parameters are displayed. Input equalization, color range, and HDCP settings are available from this menu. The frame detector, Lightware's diagnostic tool for debugging purpose is also available on the panel.

You can customize the name of the port via the **Rename** button. Factory default settings for the current input or all inputs can be recalled by selecting the **Current input** and **All inputs** buttons. By pressing the **Switch this input to all outputs** button, the current input port is directed to all outputs.

6.5.5. Frame Detector

The ports can show detailed information about the signal like blanking intervals and active video resolution. This feature is a good troubleshooter if compatibility problems occur during system installation. To access this function, open the port properties window and click on the **Frame detector** button.

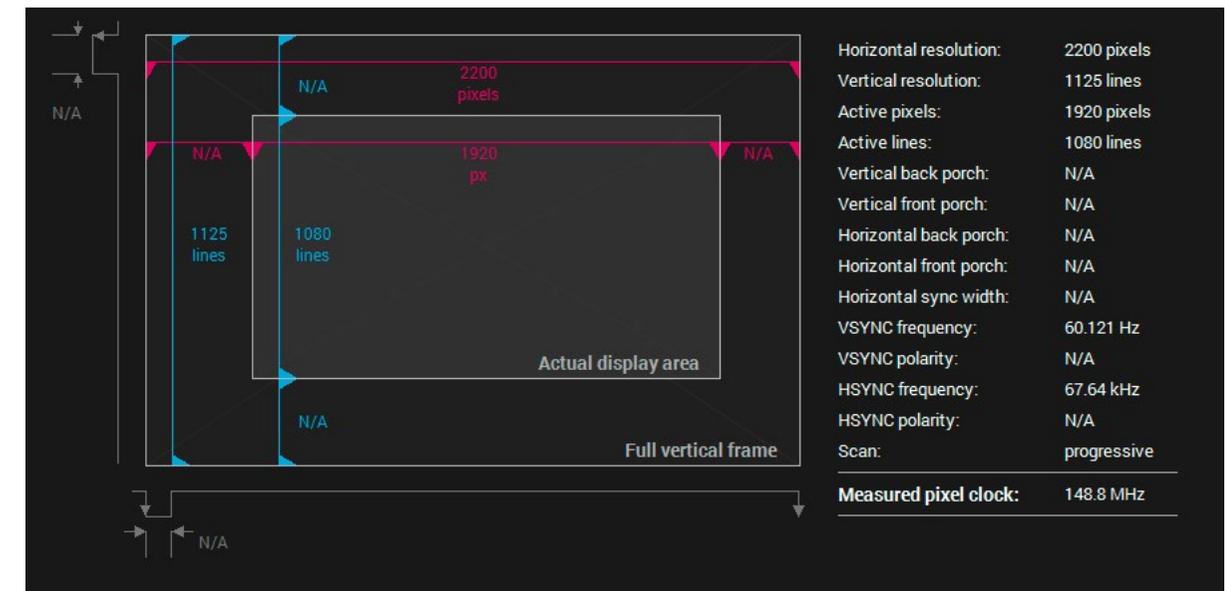


Frame Detector Window

Lightware's frame detector function works like a signal analyzer and makes it possible to determine the exact video format that is present on the port, thus helps identify many problems. E.g. actual timing parameters may differ from the expected and this may cause some displays to drop the picture.

Frame detector measures detailed timings on the video signals just like a built-in oscilloscope, but it is much easier to use. The actual display area shows the active video size (light grey). The dark gray area of the full frame is the blanking interval, which can contain the info frames and embedded audio data for HDMI signals. The shown values are measured directly on the signal and not retrieved only from the HDMI info frames.

6.5.6. Presets

Preset operations can be done in the **Crosspoint** submenu on the **Presets tab**. Each Lightware matrix router has 32 preset memories that can be loaded and saved at any time.

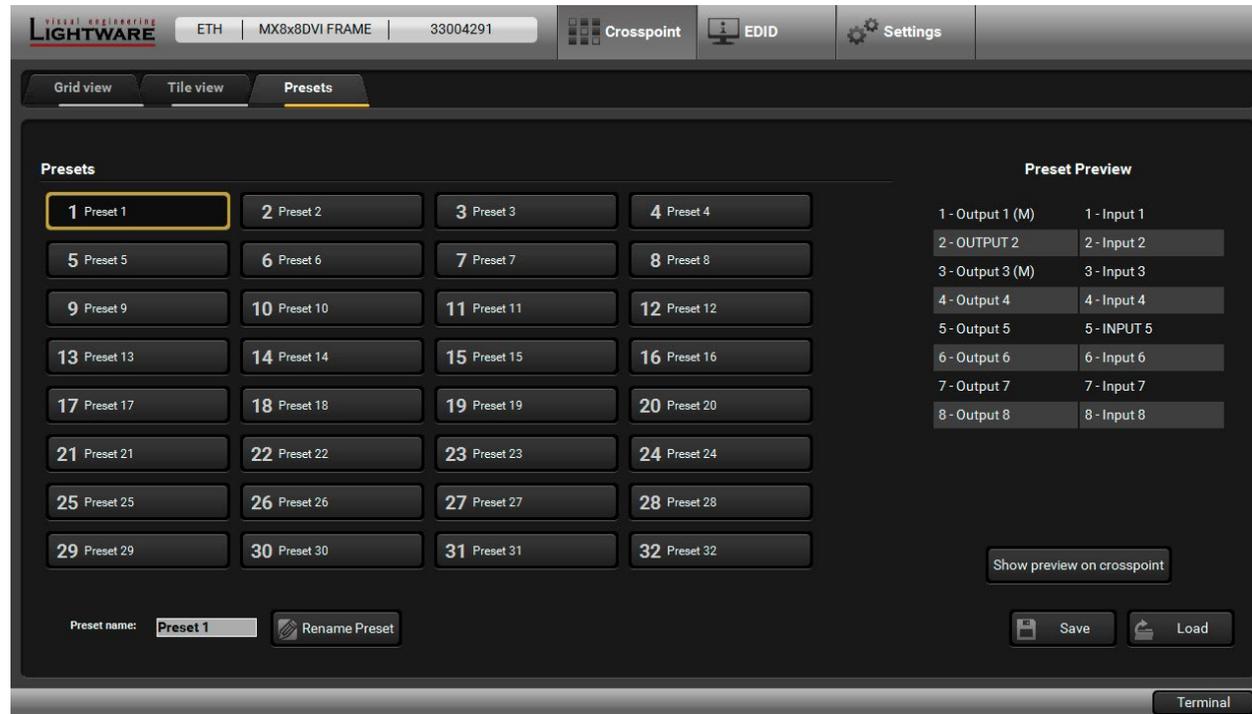


The Presets Tab

INFO: A preset setting stores a full configuration of all outputs. The preset loading has an effect on every output, except the locked ones.

Preset Preview

A preset can be selected by pressing its button on the left. The **Show preview on crosspoint** button will show the crosspoint of the input and output ports.

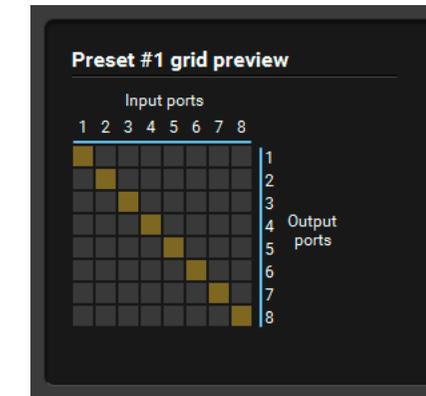

Loading a Preset

- Step 1.** Select the **Presets** tab from Crosspoint menu.
- Step 2.** Select the **preset memory** (Preset1... Preset32) you want to load.
- Step 3.** Press the **Load** button; the preset is loaded.
- Step 4.** The new I/O configuration is displayed in Grid view.

Saving a Preset

- Step 1.** Arrange the desired crosspoint connections.
- Step 2.** Select the **preset memory** (Preset1...Preset32) where you want to save your current crosspoint connections.
- Step 3.** Press the **Save** button below the Preset preview list.
- Step 4.** A confirmation message is displayed on the information bar; the preset is stored.

Renaming a Preset

- Step 1.** Select the **preset memory** (Preset1...Preset32) you want to rename.
- Step 2.** Type the desired name and press the **Rename Preset** button; the new name is stored.

6.6. EDID Menu

The Advanced EDID Management is available in the EDID menu. There are two panels: the left one contains Source EDIDs, right one contains Destination places where the EDIDs can be emulated or copied.



The EDID Menu

Sources and Destinations

- **Factory EDID** list shows the pre-programmed EDIDs (F1-F50).
- **Dynamic EDID** list shows the display device connected to the device's outputs. The unit stores the last display devices' EDID on either output, so there is an EDID shown even if there is no display device attached to the output port at the moment.
- **User memory** locations (U1 – U50) can be used to save custom EDIDs.
- **Emulated EDID** list shows the currently emulated EDID for the inputs. The source column displays the memory location that the current EDID was routed from.

The source reads the EDID from the Emulated EDID memory on the INPUT port. Any EDID from any of the User/Factory/Dynamic EDID lists can be copied to the user memory.

EDID Emulation Types

- **Static EDID emulation:** an EDID from the Factory or User EDID list is selected. Thus, the Emulated EDID remains the same until the user emulates another EDID.
- **Dynamic EDID emulation:** it can be enabled by selecting a slot from the Input 1..Input 16 EDID memory. The attached monitor's EDID is copied to the input; if a new monitor is attached to the output, the emulated EDID changes automatically.

6.6.1. EDID Operations

Changing the Emulated EDID

- Step 1.** Choose the desired **EDID list** (source panel) and select an EDID.
- Step 2.** Press the **Emulated** button on the top of the Destination panel.
- Step 3.** Select the desired **ports** on the right panel (one or more ports); the EDID(s) will be highlighted in yellow.
- Step 4.** Press the **Transfer** button to change the emulated EDID.

Learning an EDID

The process is the same as changing the emulated EDID; the only difference is the Destination panel: press the User button. Thus, one or more EDIDs can be copied into the user memory either from the factory memory or from a connected sink (Dynamic).

Exporting an EDID

ATTENTION! This function is working on Windows and Mac OS X operating systems and under Firefox or Chrome web browsers only.

Source EDID can be downloaded as a file (*.bin, *.dat or *.edid) to the computer.

- Step 1.** Select the desired **EDID** from the Source panel (the line will be highlighted in yellow).
- Step 2.** Press the **Save** button to open the dialog box and save the file to the computer.

Importing an EDID

A previously saved EDID (*.bin, *.dat or *.edid file) can be uploaded to the user memory:

- Step 1.** Press the **User** button on the top of the Source panel and select a memory slot.
- Step 2.** Press the **Upload** button below the Source panel.
- Step 3.** Browse the file in the opening window, then press the **Open** button. The browsed EDID is imported into the selected User memory.

ATTENTION! The imported EDID overwrites the selected memory place even if it is not empty.

Deleting EDID(s)

The EDID(s) from User memory can be deleted as follows:

- Step 1.** Press the **User** button on the top of the Destination panel.
- Step 2.** Select the desired **memory slot(s)**; one or more can be selected (Select All and Deselect All buttons can be used). The EDID(s) will be highlighted in yellow.
- Step 3.** Press the **Delete selected** button to delete the EDID(s).

6.6.2. EDID Summary Window

Select an EDID from Source panel and press **Info** button to display EDID summary window.

The screenshot shows the EDID Summary Window. On the left is a vertical list of categories: General, Power Management, Gamma / Colors, Established Timings, Standard Timings, Preferred Timing Mode, 2nd Descriptor Field, 3rd Descriptor Field, 4th Descriptor Field, CEA General, CEA Video, CEA Audio, CEA Speaker Allocation, CEA HDMI VSDB, CEA HDMI Forum VSDB, CEA YCbCr 4:2:0 VDB, CEA YCbCr 4:2:0 Capability Map, CEA Colorimetry, CEA High Dynamic Range, and CEA Detailed Timing Descriptors. The 'General' category is selected, and its details are shown on the right:

General	
EDID version:	1
EDID revision:	3
Manufacturer ID:	SAM (Samsung Electric Company)
Product ID:	8E09
Monitor serial number:	Not present
Year of manufacture:	2012
Week of manufacture:	9
Signal interface:	Digital
Separate Sync H&V:	-
Composite sync on H:	-
Sync on green:	-
Serration on VS:	-
Color depth:	Undefined
Interface standard:	Not defined
Color spaces:	RGB 4:4:4 & YCrCb 4:4:4
Aspect ratio:	0.56
Display size:	52 cm X 29 cm

The EDID Summary Window

6.6.3. Editing an EDID

Select an EDID from the Source panel and press the Edit button to display the Advanced EDID Editor window. The editor can read and write all descriptors that are defined in the standards, including the additional CEA extension. Any EDID from the device's memory or a saved EDID file can be loaded into the editor.

The screenshot shows the EDID Editor Window. On the left is a vertical list of categories: Basic EDID, Vendor / Product Information, Display Parameters, Power Management and Features, Gamma / Color and Established Timings, Standard Timings, Preferred Timing Mode, 2nd Descriptor Field, 3rd Descriptor Field, 4th Descriptor Field, CEA Extension, General, Video Data, Audio Data, Speaker Allocation Data, HDMI VSDB, HDMI Forum VSDB, YCbCr 4:2:0 VDB, YCbCr 4:2:0 Capability Map, Colorimetry, High Dynamic Range, Detailed Timing Descriptor #1, Detailed Timing Descriptor #2, Detailed Timing Descriptor #3, and Detailed Timing Descriptor #4. The 'Basic EDID' category is selected, and its details are shown on the right:

EDID Byte Editor										
	0	1	2	3	4	5	6	7	8	9
0	00	FF	FF	FF	FF	FF	FF	00	4C	2D
10	8E	09	00	00	00	00	09	16	01	03
20	80	34	1D	78	0A	7D	D1	A4	56	50
30	A1	28	0F	50	54	BD	EF	80	71	4F
40	81	C0	81	00	81	80	95	00	A9	C0
50	B3	00	01	01	02	3A	80	18	71	38
60	2D	40	58	2C	45	00	09	25	21	00
70	00	1E	66	21	56	AA	51	00	1E	30
80	46	8F	33	00	09	25	21	00	00	1E
90	00	00	00	FD	00	18	4B	1A	51	17
100	00	0A	20	20	20	20	20	20	00	00
110	00	FC	00	54	32	34	42	33	30	31
120	0A	20	20	20	20	20	01	6C		

The EDID Editor Window

The software resolves the raw EDID and displays it as readable information to the user. All descriptors can be edited, and saved in an EDID file, or uploaded to the User memory. For more details about the EDID Editor, please visit our website and download the [EDID Editor Application Notes](#).

6.6.4. Creating an EDID

Since the Advanced EDID Editor mentioned above needs more complex knowledge about EDID, Lightware introduced a wizard-like interface for fast and easy EDID creation. With Easy EDID Creator it is possible to create custom EDIDs in four simple steps.



The screenshot shows the 'Easy EDID Creator' window. On the left is a sidebar with a progress indicator showing 'Select Resolution & Interface' as the current step, followed by 'Video Format', 'Audio Format', and 'Finish'. Below the progress indicator are 'Back' and 'Next' buttons. The main area is titled 'Select Resolution & Interface' and contains the following text: 'Welcome to the Easy EDID Creator!', 'With this software you are able to create a unique EDID according to your demands. Details can be added or changed in the Advanced EDID Editor later if needed.', 'Please select the format type and the preferred resolution. If you don't find the proper mode in the list, use the Custom format type setting, enter the resolution and the program will estimate the best blanking times.', and 'Important notes:'. The notes include: 'If you want to send audio then you must select HDMI or DisplayPort. DVI and VGA do not support audio transmission.', 'Most DVI displays are not able to process HDMI signals. If you have a DVI display, please check its specifications.', and 'The supported color depth will be 24bits/pixel by default.'. Below the text are two dropdown menus: 'Format type:' set to 'Broadcast' and 'Resolution:' set to '640x480p60'. At the bottom, there are four buttons for 'Interface type': 'VGA', 'DVI', 'HDMI' (which is highlighted with a yellow border), and 'DisplayPort'.


The Easy EDID Creator Window

By clicking on the **Create** button below the Source panel, Easy EDID Creator is opened in a new window. For more details about the EDID Creator, please visit our website and download the [EDID Editor Application Notes](#).

6.7. Settings Menu

6.7.1. Configuration Tab

Settings about establishing the connection to the matrix are available on this tab.

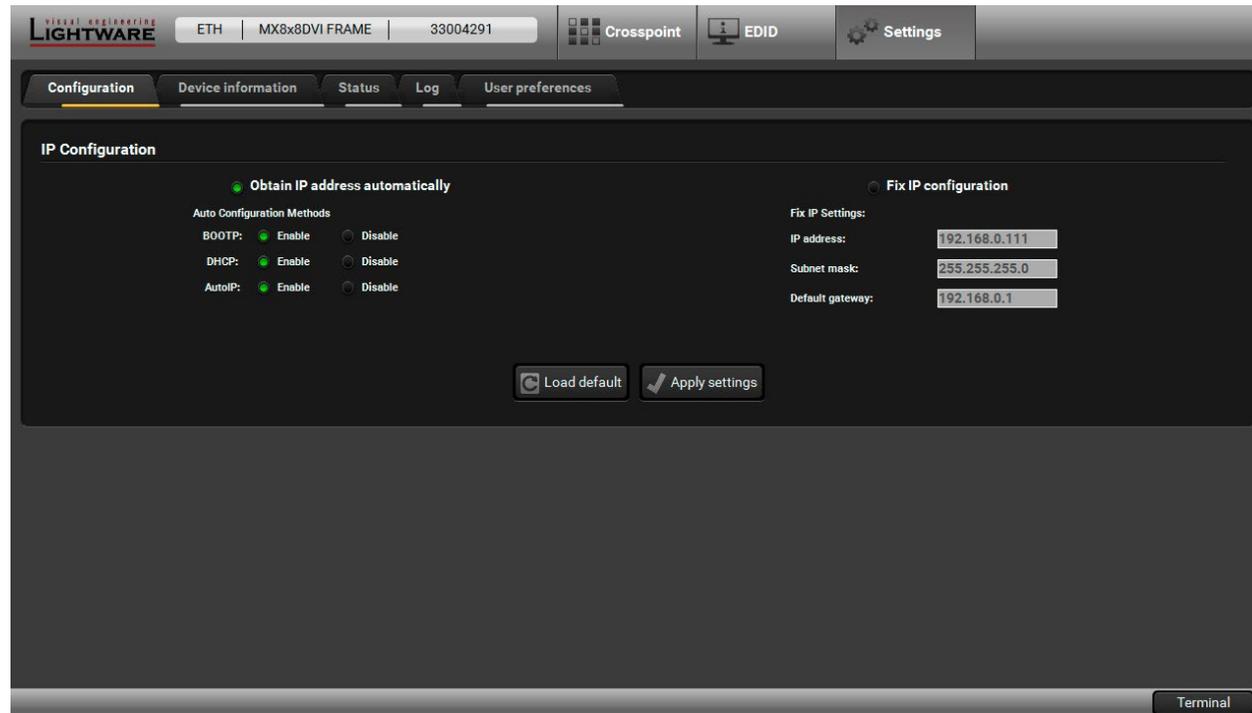

The Configuration Tab

IP Configuration

Getting the IP Address Automatically

The feature means that the matrix gets the IP address from the DHCP server on the LAN. If DHCP server is not present, the device gets an AutoIP address from 169.254.xxx.xxx domain automatically. Set BOOTP, DHCP and AutoIP settings according to your network requirements. Always press the **Apply settings** button to save changes.

INFO: The Load default button restores the default network settings (fix IP) of the device: fix IP Address: 192.168.254.254, Subnet Mask: 255.255.0.0, Default Gateway: 0.0.0.0.

Static IP Configuration

In this case, the connected device has an IP address configuration set up by the user/administrator. Depending on modified settings, you might need to restart the device and the Control Software. Always press the **Apply settings** button to save changes.

INFO: The Load default button restores the default network settings (fix IP) of the device: fix IP Address: 192.168.254.254, Subnet Mask: 255.255.0.0, Default Gateway: 0.0.0.0.

TCP Port Configuration


Devices can be accessed via this TCP/IP port number with TCP connection. Port number can be modified to any number between 1025 and 65535 except the following:

- 9999, 14000 - 14009, 30704, and 30718.
- To use a matrix with Barco Encore, set the port to 23.
- To use a matrix with Vista Spyder, set the port to 10001.

Always press the **Apply settings** button to save changes.

6.7.2. Device Information Tab


Basic information is displayed about the device in this menu: Device type with serial number and the type of the installed boards with firmware and hardware version.

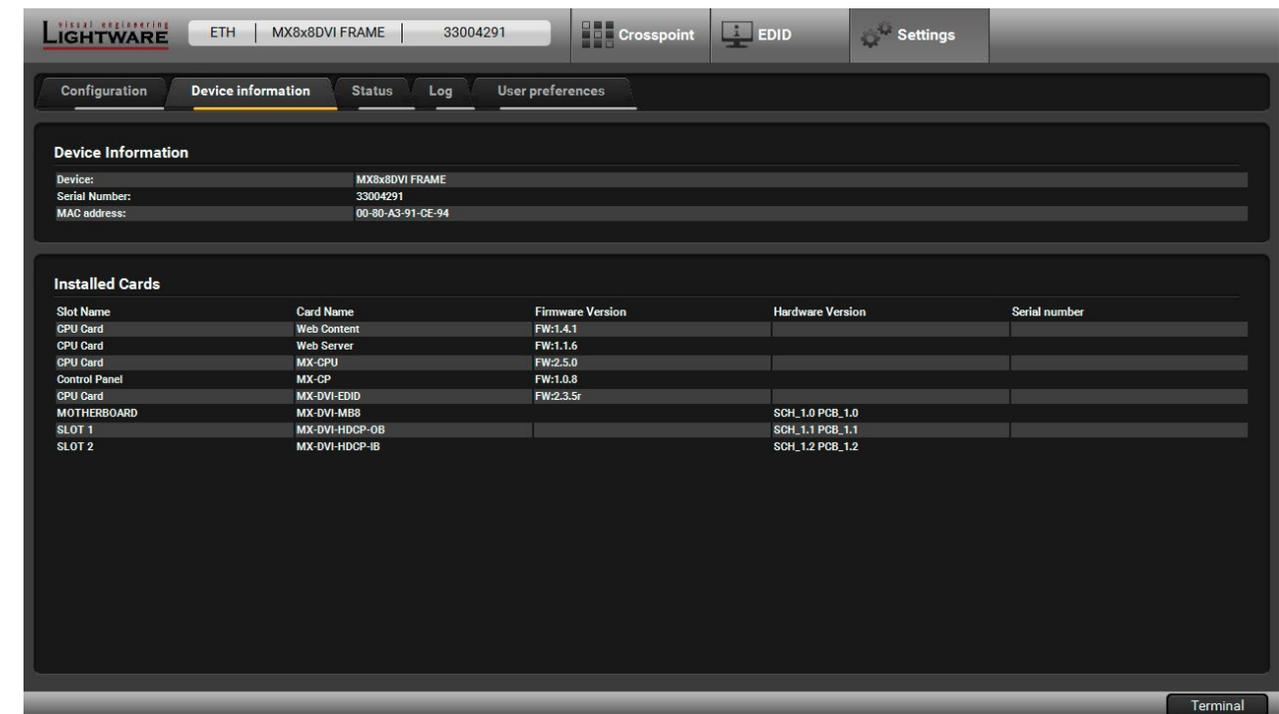

The Device Information Tab


6.7.3. Status Tab

The voltage levels and temperature measured by the CPU of the device are shown. Press the **Refresh** button to show/update values.

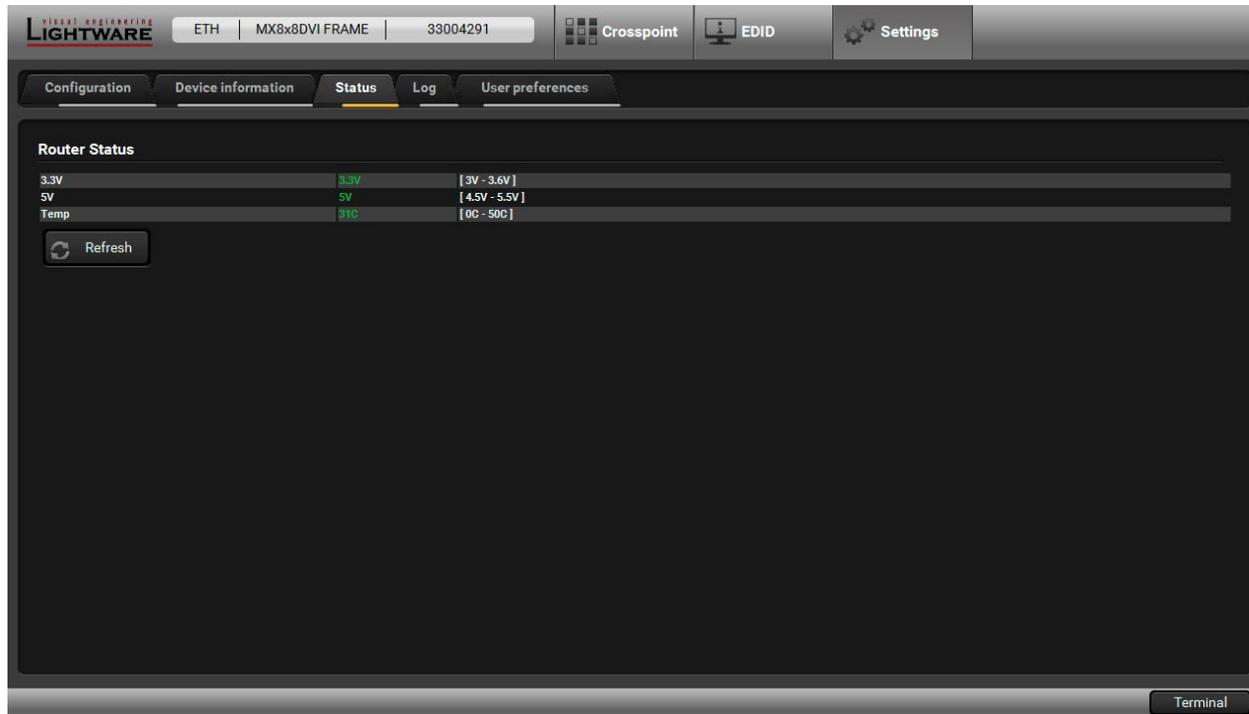

The Status Tab

6.7.4. Log Tab

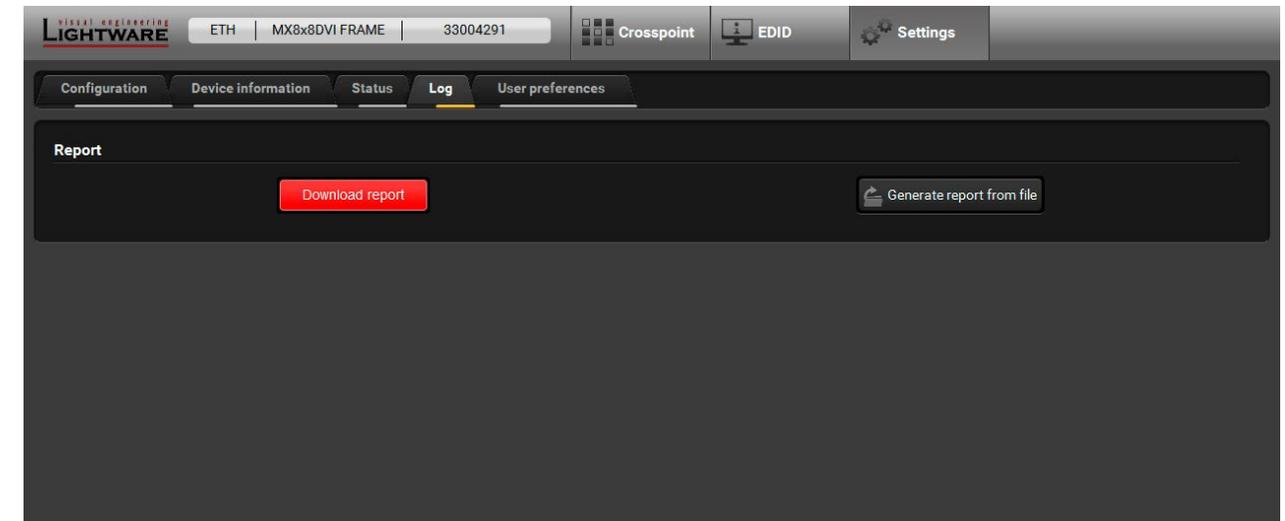

The Log Tab

Generating a Standard Report File

[Download report](#)

LDC is able to collect information from the device and save it to a report file. This information package can be sent to Lightware when a problem may arise with the device.

ATTENTION! When a report is necessary to be generated, always leave the devices connected to the device, do not disconnect them. The Controller Software will collect information about the devices and about their status.

Step 1. Press the **Download report** button on the **Log** tab in the **Settings** menu:

Step 2. The **Save as** dialog box appears. Select the place where you want to save the report file. The default file name can be changed.

Step 3. LDC collects the needed information. This may take up to 5 minutes.

Step 4. When the process is finished, the folder is opened where the file was saved. The report contains the following information:

- The current command protocol,
- The equipment type and serial number,
- Status of input/output ports,
- Installed controllers and I/O board types and firmware with versions,
- Network settings,
- EDID headers and status (emulated, dynamic, factory, user).


Generating a Custom Report File

[Generate report from file](#)

The Controller Software is able to send a custom command file to the device. The command file can be generated by Lightware support. This is needed when some special commands have to be used for configuring or for special troubleshooting cases.

6.7.5. User Preferences

The tab shows a few settings in connection with the LDC displaying/working mode.

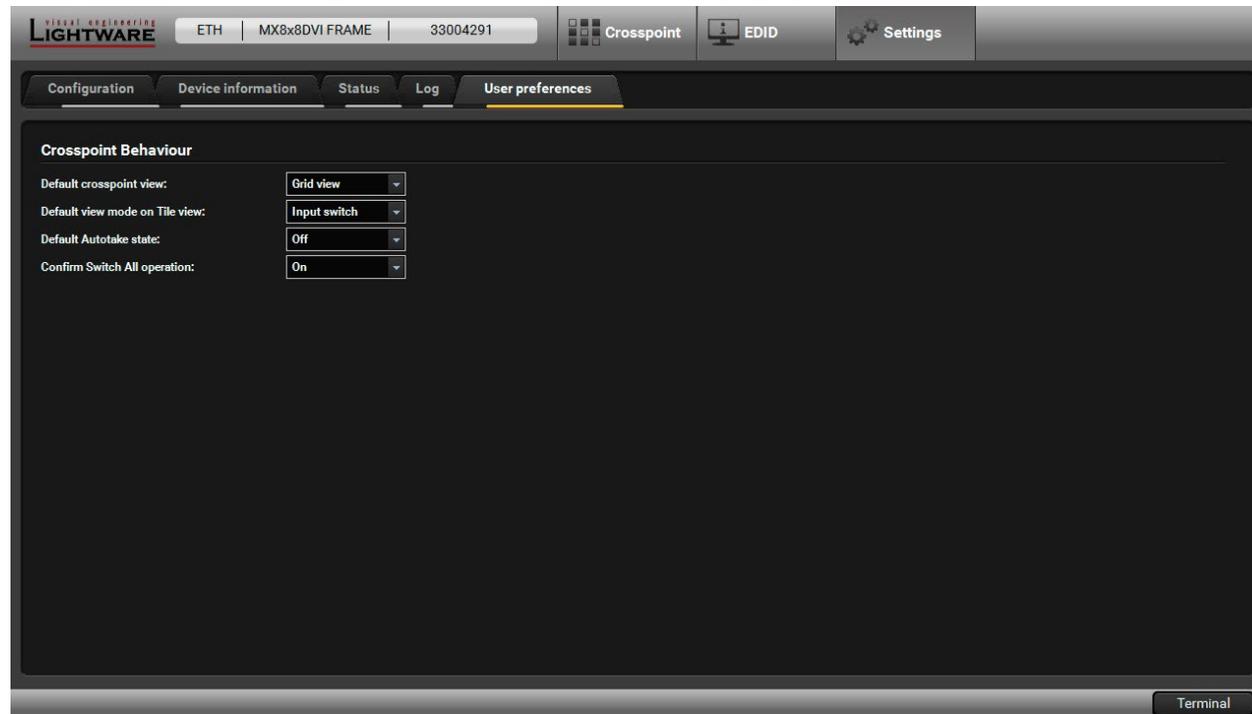


The User Preferences Tab

These settings are saved by the LDC and applied next time the software is started (independently of the type of the matrix). The size of the LDC window is also restored from the last run.

6.8. Terminal Window

This general purpose terminal is mainly intended for testing and debugging purposes. When a successful connection is established with a router, this terminal can be used either via serial RS-232, TCP/IP LAN or USB connection. All commands can be used here that are discussed in the programmer's reference. The command text can be typed directly.

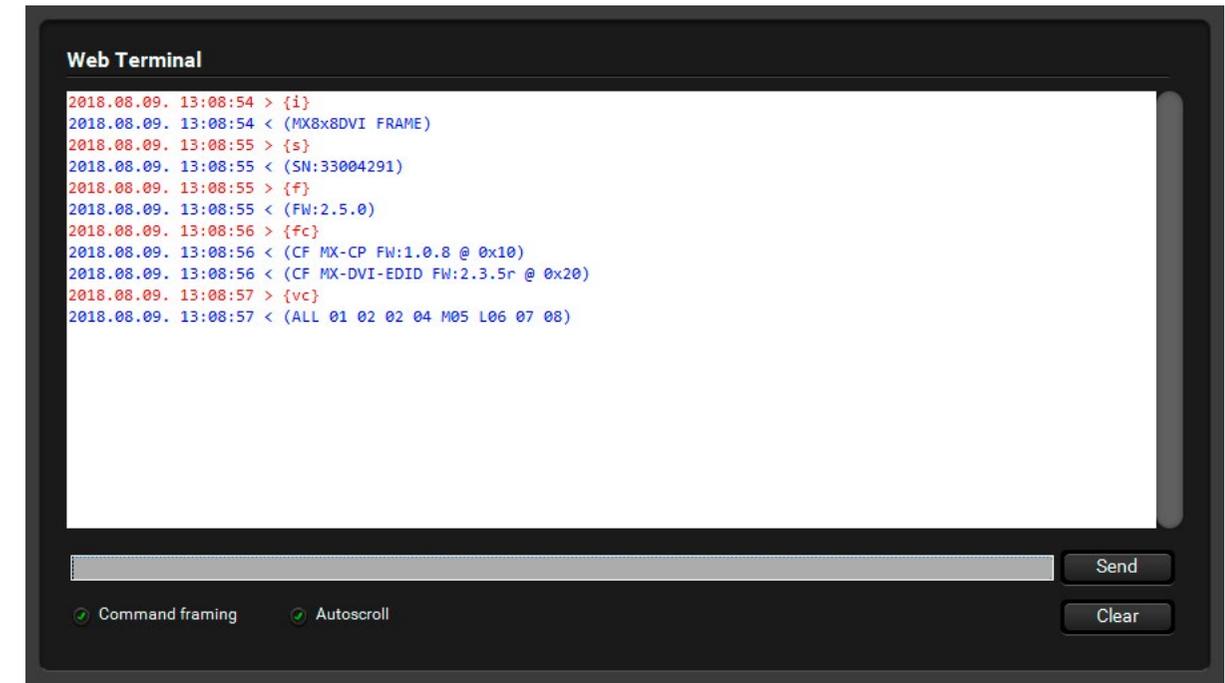

The Terminal Window

By default, commands are automatically surrounded by framing brackets. Every sent command and every received response gets an arrow (-> or <-) prefix, and has different font colors in order to help distinguish between them.

The timecode in every row shows the exact time when the command was sent or the response received.

If the **Command framing** checkbox is unchecked, you can send multiple commands together, however, in this case you have to type in the framing brackets manually.

The terminal can also be opened after starting the LDC - press the Terminal button on the Device discovery page on the bottom of the window.

TIPS AND TRICKS: The typed commands can be 'browsed' when the cursor is in the command line and you press the up button on the keyboard. The commands are stored until the LDC is closed.

7

Programmers' Reference

ATTENTION! The matrix router supports only the LW1 command protocol set mentioned below. Further LW2 and LW3 command sets are not supported.

The device can be controlled through a set of protocol commands to ensure the compatibility with other Lightware products. The supported commands are described in this chapter.

- ▶ [PROTOCOL DESCRIPTION](#)
- ▶ [INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE](#)
- ▶ [GENERAL COMMANDS](#)
- ▶ [PORT SETTINGS](#)
- ▶ [NETWORK CONFIGURATION](#)
- ▶ [EDID ROUTER COMMANDS](#)
- ▶ [PORT STATUS COMMANDS](#)
- ▶ [PROGRAMMERS' REFERENCE – QUICK SUMMARY](#)

7.1. Protocol Description

The device accepts commands surrounded by curly brackets - { } - and responds data surrounded by round brackets - () - only if a command was successfully executed.

Format	Explanation
<in>	Input number in 1- or 2-digit ASCII format (01, 5, 07, 16, etc.)
<out>	Output number in 1- or 2-digit ASCII format
<in ² >	Input number in 2-digit ASCII format (01, 02, 10, 12 etc.)
<out ² >	Output number in 2-digit ASCII format (01, 02, 10, 12 etc.)
<loc>	Location number in 1-, 2- or 3-digit ASCII format
<id>	ID number in 1- or 2-digit ASCII format
<id ² >	ID number in 2-digit ASCII format
CrLf	Carriage return, Line feed (0x0D, 0x0A)
·	Space character (0x20)
→	Each command issued by the controller
←	Each response received from the router

7.2. Instructions for the Terminal Application Usage

Terminal Application



The LW1 protocol commands can be applied to the receiver using a terminal application. You need to install one of them on your control device, for example **Putty** or **CLI**. *#terminal*

Establishing Connection

Follow the steps to establish connection to the receiver:

- Step 1.** Connect the receiver to a LAN over Ethernet.
- Step 2.** Open the terminal application (e.g. Putty).
- Step 3.** Add the **IP address** of the device (default: 192.168.0.100) and the **port number (10001)**.
- Step 4.** Select the **Raw** connection type, and open the connection.

Once the terminal window is opened, you can enter the LW1 protocol commands, which are listed in the following sections.

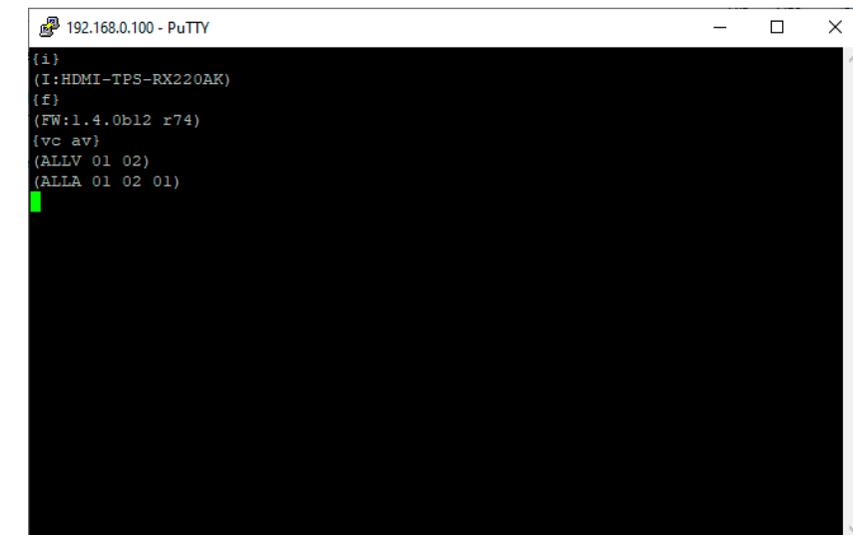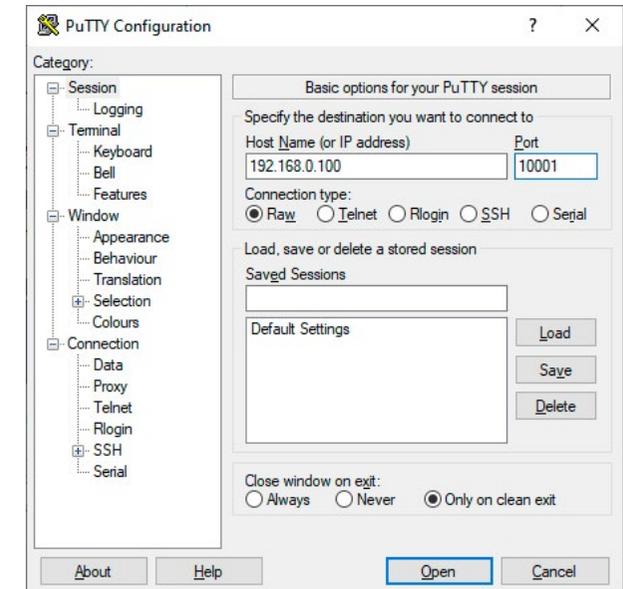

LW1 protocol command communication in a terminal window

7.3. General Commands

7.3.1. Viewing the Product Type

Description: The device responds its name.

Command and Response

```
→ {}
← (<PRODUCT_TYPE>)CrLf
```

Example

```
→ {}
← (MX8x8DVI FRAME)CrLf
```

Explanation: The connected device is a MX8x8DVI-HDCP-PRO.

Legend: <PRODUCT_TYPE> shows type.

7.3.2. Viewing the Firmware Version of the CPU

Description: View the CPU firmware version.

Command and Response

```
→ {}
← (FW:<FW_VER><s>)CrLf
```

Example

```
→ {}
← (FW:2.5.0)CrLf
```

Legend: <FW_VER> is the firmware version. It is followed by <s> string, which may indicate special versions.

7.3.3. Viewing the Serial Number

Description: The device responds its 8-digit serial number.

Command and Response

```
→ {s}
← (SN:<SERIAL_N>)CrLf
```

Example

```
→ {s}
← (SN:33004291)CrLf
```

7.3.4. Compile Time

Description: Returns the date when the microcontroller firmware was compiled, and the build number.

Command and Response

```
→ {CT}
← (Complied: <DATE&TIME>, <BUILD no>)CrLf
```

Example

```
→ {ct}
← (Compiled: Nov 25 2013 12:40:07, build: 1737)CrLf
```

7.3.5. Viewing the Installed Boards

Description: Shows the hardware name and revision of the installed cards.

Command and Response

```
→ {is}
← (SL#•0•<MB_DESC>)CrLf
← (SL#•1•<OB_DESC>)CrLf
← (SL#•2•<Empty_Slot>)CrLf
← (SL#•3•<Empty_Slot>)CrLf
← (SL#•4•<Empty_Slot>)CrLf
← (SL#•5•<IB_DESC>)CrLf
← (SL#•6•<Empty_Slot>)CrLf
← (SL#•7•<Empty_Slot>)CrLf
← (SL#•8•<Empty_Slot>)CrLf
← (SL•END)CrLf
```

Example

```
→ {is}
← (SL# 0 MX-DVI-MB8 SCH_1.0 PCB_1.0)CrLf
← (SL# 1 MX-DVI-HDCP-OB SCH_1.1 PCB_1.1)CrLf
← (SL# 2 Empty Slot)CrLf
← (SL# 3 Empty Slot)CrLf
← (SL# 4 Empty Slot)CrLf
← (SL# 5 MX-DVI-HDCP-IB SCH_1.2 PCB_1.2)CrLf
← (SL# 6 Empty Slot)CrLf
← (SL# 7 Empty Slot)CrLf
← (SL# 8 Empty Slot)CrLf
← (SL END)CrLf
```

Explanation: The device reports the motherboard (slot 0), the output board (slot 1) and the input board (slot 5). Slot 2, 3, 4, 6, 7, 8 are only virtual slots and empty.

7.3.6. Viewing Firmware for All Controllers

Description: Shows the firmware versions of all installed controllers.

Command and Response

```
→ {FC}
← (CF•<DESC>)CrLf
← (CF•<DESC>)CrLf
...
← (CF END)CrLf
```

Example

```
→ {fc}
← (CF MX-CP FW:1.0.8 @ 0x10)CrLf
← (CF MX-DVI-EDID FW:2.3.5r @ 0x20)CrLf
...
← (SL END)CrLf
```

Explanation: The device has two control panels.

7.3.7. Restarting the Device

Description: The device can be restarted without unplugging power.

Command and Response

```
→ {RST}
← (CPU_RESET...)
← (MX8x8DVI FRAME Ready!)
```

Example

```
→ {RST}
← (CPU_RESET...)
← (MX8x8DVI FRAME Ready!)CrLf
```

Explanation: The device reboots.

7.3.8. Querying Health Status

Description: Internal voltages and measured temperature values are shown.

Command and Response

```
→ {ST}
← (STAT•<DESC>)CrLf
```

Example

```
→ {ST}
← (STAT 3.3V 5.0V 29V)CrLf
```

7.3.9. Viewing the Current Communication Protocol

Description: Shows the RS-232, TCP/IP communication protocol.

Command and Response

```
→ {P_?}
← (CURRENT•PROTOCOL•=#<x>)CrLf
```

Example

```
→ {p_?}
← (CONTROL PROTOCOL = #1)CrLf
```

Explanation: The current communication protocol is Lightware protocol.

Legend:

No.	Control protocol
1	Lightware protocol
2	P#2 protocol

7.3.10. Setting the Communication Protocol

Description: The active communication protocol can be set with this command.

Command and Response

```
→ {P_<x>}
← (PROTOCOL•#<x>•SELECTED!)CrLf
```

Example

```
→ {p_1}
← (PROTOCOL #1 SELECTED!)CrLf
```

Explanation: The communication protocol is set to Lightware protocol.

7.3.11. Counting HDCP Keys

Description: If there is an HDCP source on any input of the matrix, the matrix can ask the source whether it can handle the <num> piece of sink devices.

Command and Response

→ {:HDCPTEST<in>@<num>}

← (HDCPTEST=SUCCESS)CrLf

Example

→ {:hdcptest2@8}

← (HDCPTEST=SUCCESS)CrLf

Explanation: The source on the 2nd input can handle 8 HDCP sink devices.

Legend:

Identifier	Explanation
<in>	input port where the key counting will be executed
<num>	the number of the HDCP keys

7.3.12. Clearing the HDCP Key Cache

Description: The matrix stores the HDCP keys from the connected devices. These cached keys can be cleared with this command.

Command and Response

→ {:HDCPRESET}

← (DONE)CrLf

Example

→ {:hdcpreset}

← (DONE)CrLf

Explanation: HDCP key cache is cleared.

INFO: This function is useful when too many keys were cached and a connected source device cannot accept so many keys.

7.4. Port Settings

7.4.1. Switching One Input to One Output

Description: Switch input <in> to output <out>.

Command and Response

```
→ {<in>@<out>}
← (O<out?>•I<in?>)CrLf
```

Example

```
→ {1@2}
← (O02 I01)CrLf
```

Explanation: I2 input port is switched to O1 output port.

Legend:

```
<out>:      01 to 08 output ports
<in>:      I1 to I8 input ports.
```

ATTENTION! The response of this command does not show if the output is muted. To check the mute status, a separate query has to be used, like {VC}. See the [Viewing the Connection State](#) section.

7.4.2. Switching One Input to All Outputs

Description: Switch input <in> to all outputs.

Command and Response

```
→ {<in>@0}
← (I<in?>•<ALL>)CrLf
```

Example

```
→ {1@0}
← (I01 ALL)CrLf
```

Explanation: I1 input port is switched to all output ports.

7.4.3. Muting a Specified Output

Description: Mute output <out>. The output signal is turned off.

Command and Response

```
→ {#<out>}
← (1MT<out?>)CrLf
```

Example

```
→ {#01}
← (1MT01)CrLf
```

Explanation: O1 port is muted.

ATTENTION! Muting does not change the crosspoint's state, but disables the output itself. This way the last connection can be easily restored with an unmute command. Switching a muted output does not unmute the output.

7.4.4. Unmuting a Specified Output

Description: Unmute output <out>.

Command and Response

```
→ {+<out>}
← (0MT<out?>)CrLf
```

Example

```
→ {+01}
← (0MT01)CrLf
```

Explanation: O1 port is unmuted.

INFO: Unmuting an output makes the previous connection active, as the crosspoint state has not been changed by the muting command, only the output was disabled.

7.4.5. Locking an Output

Description: Lock an output port. Output's state cannot be changed until unlocking.

Command and Response

```
→ {#><out>}
← (1LO<out?>)CrLf
```

Example

```
→ {#>01}
← (1LO01)CrLf
```

Explanation: O1 output port is locked.

7.4.6. Unlocking an Output

Description: Unlock an output port. The connection on the output can be changed.

Command and Response

```
→ {+<<out>}
← (OLO<out?>)CrLf
```

Example

```
→ {+<01>}
← (OLO01)CrLf
```

Explanation: 01 output port is unlocked.

INFO: The device issues the response above, regardless of the previous state of the output (whether it was locked or unlocked).

7.4.7. Viewing the Connection State

Description: Viewing the crosspoint state of the device; showing the input port numbers connected to the outputs.

Command and Response

```
→ {VC}
← (ALL•<001>•<002>...<008>)CrLf
```

Example

```
→ {vc}
← (ALL M01 L02 U03 04 05 06 07 08)CrLf
```

Legend: 001 to 008 show the corresponding output's connection state. If value <001> equals 01, it means that output 1 is connected to input 1.

State letters:

Letter	State	Example
L	Output is locked	L01
M	Output is muted	M01
U	Output is locked and muted	U01

Explanation: I1 input port is connected to the O1 output port, I2 is connected to O2, and so on. O1 output port is muted, O2 is locked, O3 is muted and locked.

7.4.8. Viewing Mute State on All Outputs

Description: View muted outputs in the device.

Command and Response

```
→ {VM}
← (MUT•<001_state>•...•<008_state>)CrLf
```

Example

```
→ {vm}
← (MUT 1 0 1 0 0 0 0 0)CrLf
```

Explanation: 01 and 03 output ports are muted.

7.4.9. Saving a Preset

Description: Save current ties to a preset memory location.

Command and Response

```
→ {$<id>}
← (SPR<id>)CrLf
```

Example

```
→ {$1}
← (SPR01)CrLf
```

Explanation: Current ties are saved to memory location 1.

ATTENTION! The router saves the mute state of the outputs as well.

ATTENTION! Lock states are not saved. Lock state is assigned to the physical output of the router. Presets don't affect output locks.

7.4.10. Loading a Preset

Description: Load a preset from memory location.

Command and Response

```
→ {%<id>}
← (LPR<id>)CrLf
```

Example

```
→ {%01}
← (LPR01)CrLf
```

ATTENTION! The router loads the mute state of the outputs as well.

ATTENTION! Lock states are not loaded. Lock state is assigned to the physical output of the router. Presets don't affect output locks.

7.4.11. Viewing a Preset Without Loading

Description: View the specified preset without loading it.

Command and Response

```
→ {VP#<id>=?}
← (VP#<id>=••<001>•...•<008>)CrLf
```

Example

```
→ {VP#1=?}
← (VP#1= M01 02 M03 04 05 06 07 08)CrLf
```

7.4.12. Naming Presets

Description: Allows storing names for each preset. Any 16-byte-long string is allowed.

ATTENTION! All characters are converted to uppercase!

Command and Response

```
→ {PNAME#<id>=<preset_name>}
← (PNAME#<id>=<preset_name>)CrLf
```

Example

```
→ {PNAME#1=first preset}
← (PNAME#1=FIRST PRESET)CrLf
```

7.4.13. Naming Inputs

Description: Allows storing names for each input. Any 16-byte-long string is allowed.

ATTENTION! All characters are converted to uppercase!

Command and Response

```
→ {INAME#<id>=<input_name>}
← (INAME#<id>=<input_name>)CrLf
```

Example

```
→ {INAME#1=first input}
← (INAME#1=FIRST INPUT)CrLf
```

7.4.14. Naming Outputs

Description: Allows storing names for each output. Any 16-byte-long string is allowed.

ATTENTION! All characters are converted to uppercase!

Command and Response

```
→ {ONAME#<id>=<output_name>}
← (ONAME#<id>=<output_name>)CrLf
```

Example

```
→ {ONAME#1=first output}
← (ONAME#1=FIRST OUTPUT)CrLf
```

7.4.15. Querying a Preset Name

Description: Each preset name can be read from the router.

Command and Response

```
→ {PNAME#<id>=?}
← (PNAME#<id>=<preset_name>)CrLf
```

Example

```
→ {PNAME#1=?}
← (PNAME#1=FIRST PRESET)CrLf
```

7.4.16. Querying an Input Name

Description: Each input name can be read from the router.

Command and Response

```
→ {INAME#<id>=?}
← (INAME#<id>=<input_name>)CrLf
```

Example

```
→ {INAME#1=?}
← (INAME#1=FIRST INPUT)
```

7.4.17. Querying an Output Name

Description: Each output name can be read from the router.

Command and Response

```
→ {ONAME#<id>=?}
← (ONAME#<id>=<output_name>)CrLf
```

Example

```
→ {ONAME#1=?}
← (ONAME#1=FIRST OUTPUT)CrLf
```

7.4.18. Reloading Default Preset Names

Description: Renames all presets to the default setup Preset 1..32 respectively.

ATTENTION! The <id> field has no meaning here, but it needs to be a valid one!

Command and Response

```
→ {PNAME#<id>=!}
← (PNAME#<id>=Preset•<id>)CrLf
```

Example

```
→ {PNAME#1=!}
← (PNAME#1=Preset 1)CrLf
```

7.4.19. Reloading Default Input Names

Description: Renames all inputs to the default setup Input 1..8 respectively.

ATTENTION! The <id> field has no meaning here, but it needs to be a valid one!

Command and Response

```
→ {INAME#<id>=!}
← (INAME#<id>=Input•<id>)CrLf
```

Example

```
→ {INAME#1=!}
← (INAME#1=Input 1)CrLf
```

7.4.20. Reloading Default Output Names

Description: Renames all outputs to the default setup Output 1..8 respectively.

ATTENTION! The <id> field has no meaning here, but it needs to be a valid one!

Command and Response

```
→ {ONAME#<id>=!}
← (ONAME#<id>=Output•<id>)CrLf
```

Example

```
→ {ONAME#1=!}
← (ONAME#1=Output 1)
```

7.5. Network Configuration

7.5.1. Querying the Current IP Configuration

Description: IP address settings can be queried as follows.

Command and Response

```
→ {IP_CONFIG=?}
← (IP_CONFIG=<type>•<ip_address>•<ip_port>•<subnet_mask>•<gateway_addr>)CrLf
```

Example

```
→ {ip_config=?}
← (IP_CONFIG=7 192.168.0.103 10001 255.255.255.0 192.168.0.1)CrLf
```

Legend:

<type>:	0 = static IP; 7 = DHCP.
<ip_addr>:	IP address.
<ip_port>:	IP port
<subnet_mask>:	Subnet mask
<gateway_addr>:	Gateway address

Explanation: The device has a DHCP IP address: 192.168.0.103; the port number is 10001; the subnet mask is 255.255.255.0, the gateway address is 192.168.0.1.

For the default TCP/IP parameters, see the [Factory Default Settings](#) section.

7.5.2. Reloading Factory Default IP Settings

Description: After issuing this command (either over serial or IP), the router will reload the factory default IP setup.

Command and Response

```
→ {IP_CONFIG=!}
← (Changing IP configuration...)
← (DONE!)CrLf or (FAILED!)CrLf
```

Example

```
→ {IP_CONFIG=!}
← (Changing IP configuration...)
← (DONE!) or (FAILED!)CrLf
```

For the default TCP/IP parameters, see the [Factory Default Settings](#) section.

7.5.3. Enabling the DHCP IP Setting

Description: After sending this command, the router will set the IP address with DHCP.

Command and Response

```
→ {IP_CONFIG=D}
← (Changing IP configuration...)
← (DONE!)CrLf or (FAILED!)CrLf
```

Example

```
→ {IP_CONFIG=D}
← (Changing IP configuration...)
← (DONE!) or (FAILED!)CrLf
```

INFO: DHCP setting can be reloaded by the front panel buttons as well (see the [IP Settings](#) section) or via the front panel LCD menu.

7.6. EDID Router Commands

7.6.1. Changing the EDID on an Input

Description: Copy an EDID from memory location <loc> to input port <in>.

Command and Response

```
→ {<in>:<loc>}
← (E_SW_OK)CrLf
...delay...
← (E_S_C)CrLf
```

Example

```
→ {5:10}
← (E_SW_OK)CrLf
...delay...
← (E_S_C)CrLf
```

Explanation: EDID #10 is copied to Input 5.

INFO: The router sends (E_S_C) only if the new EDID is different from the previous one.

7.6.2. Changing the EDID on All Inputs

Description: Copy an EDID from memory location <loc> to all inputs.

Command and Response

```
→ {A:<loc>}
← (E_SW_OK)CrLf
...delay...
← (E_S_C)CrLf
```

Example

```
→ {a:2}
← (E_SW_OK)CrLf
...delay...
← (E_S_C)CrLf
```

Explanation: EDID #2 is copied to all inputs.

7.6.3. Saving an EDID to User Memory

Description: Learn an EDID from the specified output <out> to the specified location <loc>.

Command and Response

```
→ {<out>><loc>}
← (E_SW_OK)CrLf
← (E_S_C)CrLf
```

Example

```
→ {4>3}
← (E_SW_OK)CrLf
← (E_S_C)CrLf
```

Explanation: The EDID from Output 3 is saved to user EDID #4.

7.6.4. Viewing the Emulated EDIDs on All Inputs

Description: Shows the currently emulated EDIDs for each input. The response length depends on the frame size (number of inputs). The value at the given index (<in1>..<inN>) shows which EDID is used on that particular input.

Command and Response

```
→ {VEDID}
← (VEDID•<IN1>•<IN2>•<IN3>•<IN4>•<IN5>•<IN6>•<IN7>•<IN8>)CrLf
```

Example

```
→ {vedid}
← (VEDID 025 101 006 102 024 101 101 024)CrLf
```

Legend: All <INx> indexes show a <loc> that was copied to that input port.

Explanation: F049 (Factory preset EDID #49) is emulated on all inputs except 9-12 and 17. U002 (User saved EDID #2) is emulated on Inputs 9-12. EDID from Output 4 is dynamically emulated on Input 17.

7.6.8. Downloading EDID Content

Description: EDID hex bytes can be read directly. The router will issue the whole content of the EDID present on memory location <loc> (256 bytes).

Command and Response

```
→ {WE<loc>}
← (EB#<loc>•<B1>•<B2>•...•<B256>)CrLf
```

Example

```
→ {we1}
← (EB#F1 00 FF FF FF FF FF FF 00 32 F2 00 00 00 ... .. 00 00) CrLf
```

Legend: <B1>..<<B256> are space separated hex characters represented in ASCII format.

Explanation: Full EDID from memory location F1 is downloaded.

7.6.9. Uploading EDID Content to the Router

Description: EDID hex bytes can be written directly to the user programmable memory locations. The sequence is the following:

Step 1. Prepare the router to accept EDID bytes to the specified location <loc> with the command {WL#<loc>}

Step 2. The router responds that it is ready to accept EDID bytes with (E_L_S)CrLf

Step 3. Send 1 block of EDID (1 block consists of 8 bytes of hex data represented in ASCII format) with the command {WB#<num>•<B1>•<B2>•<B3>•<B4>•<B5>•<B6>•<B7>•<B8>}

Step 4. The router acknowledges with the response (EL#<num>)

Step 5. Repeat steps 3 and 4 to send the remaining 31 blocks of EDID (32 altogether)

Step 6. After the last acknowledge, the router indicates that the EDID status changed by sending (E_S_C) CrLf

Command and Response

```
→ {WL#<loc>}
← (E_L_S)CrLf
→ {WB#1•<B1>•<B2>•<B3>•<B4>•<B5>•<B6>•<B7>•<B8>}
← (EL#<num>)CrLf
→ {WB#2•<B9>•<B10>•<B11>•<B12>•<B13>•<B14>•<B15>•<B16>}
← (EL#<num>)CrLf
...
→ {WB#32•<B249>•<B250>•<B251>•<B252>•<B253>•<B254>•<B255>•<B256>}
← (EL#<num>)CrLf
← (E_S_C) CrLf
```

Example

```
→ {wl#3}
← (E_L_S)CrLf
→ {WB#1 00 FF FF FF FF FF FF 00}
← (EL#1)CrLf
→ {WB#2 38 A3 8E 66 01 01 01 01}
← (EL#2)CrLf
...
→ {WB#32 36 59 42 0A 20 20 00 96}
← (EL#32)CrLf
← (E_S_C)CrLf
```

Legend: <num> represents the sequential number of every 8 byte part of EDID. <num> is between 1 and 32. <B1>..<<B256> are the bytes of EDID.

Explanation: Full EDID uploaded to memory location 3.

7.7. Port Status Commands

7.7.1. Input Port Status

Description: Shows the actual status of the input ports. The response length changes regarding the frame size.

Command and Response

```
→ {:ISD}
← (ISD•<INPUT_D>)CrLf
```

Example

```
→ {:isd}
← (ISD 31000000)CrLf
```

Explanation: The first input board is an HDMI board. Input 1 and 2 have a connected source but no signal. Inputs 3-5 have DVI signals and Inputs 6-8 have HDMI signals. The second input board is a DVI board. Input 11 and 12 have DVI signals. The Test Input port has an HDMI signal.

Legend: <INPUT_D> may contain 9, 17, 33 or 80 hexadecimal numbers. Each number represents the state of the corresponding input port. The meaning of the responded number depends on the actual board (port) type. The binary representation of the responded hexadecimal numbers is shown below.

3. bit (MSB)	2. bit	1. bit	0. bit (LSB)
0	HDMI mode	signal detect	source 5V
0	HDMI mode	signal detect	source 5V

- **Source 5V:** The connected source sends 5V.
- **Signal Detect:** Video signal is present (TMDS stream can be recognized).
- **HDMI mode:** The incoming signal is HDMI.

7.7.2. Output Port Status

Description: Shows the actual status of the output ports. The response length changes regarding the frame size. The meaning of the values changes regarding the output board types, as the boards have different functions and capabilities.

Command and Response

```
→ {OSD}
← (OSD•<OUTPUT_D>)CrLf
```

Example

```
→ {osd}
← (OSD 10000000)CrLf
```

Explanation: There are four DVI sinks connected to ports 2, 9, 11 and 12, nothing else.

Legend: <OUTPUT_D> may contain 9, 17, 33 or 80 hexadecimal numbers. Each number represents the state of the corresponding output port. The binary representation of the responded hexadecimal numbers is shown below.

3. bit (MSB)	2. bit	1. bit	0. bit (LSB)
0	0	0	receiver sense
0	0	0	receiver sense

- **Receiver Sense:** TMDS termination is present in the connected device.

7.7.3. Getting Information about an Input Port

Description: You can get more detailed information about an input HDMI port with this command. The response will contain information about the general signal parameters, the video resolution and mode, the audio format, other advanced parameters and the current settings on this port.

The response repeats the number of the input port after the STI string. There are different blocks present after the equal sign, which are separated by semicolons. Every block contains a different type of information and can be recognized from the first character. For example, a block started with 'V' is about the video resolution and format. Some of the blocks might be missing depending on the actual signal – e.g. if the port operates in DVI mode, then no audio information will be sent.

Command and Response

→ { :HDMIIGET<in> }

← (STI#<in>=<INFO>;<VIDEO>;<AUDIO>;<ADV_INFO>;<IN_SET>;)CrLf

Example

→ { :HDMIIGET1 }

← (STI1=S1131;V1920x1080p60,675,00;A1C010000;I111190;PAA;)CrLf

The exact meanings of different blocks are explained in the following sections.

Legend of the <INFO>

The signal info block contains some general information about the signal. The first character of this block must be **S**.

Format: S<a><c><d>

Example: S1131

Identifier	Parameter description	Parameter values
<a>	5V power presence	0 = 5V is not present 1 = 5V is present
	Signal detection	0 = no valid signal on the input 1 = active video signal is present
<c>	DV/HDMI mode indicator	0 = DVI mode 1 = HDMI mode (24 bpp) 2 = HDMI mode (30 bpp), deep color 3 = HDMI mode (36 bpp), deep color
<d>	HDCP state	0 = HDCP encryption is disabled 1 = HDCP encryption is active

5V and active video signal is present in HDMI deep color mode (36 bpp), HDCP is active.

Legend of the <VIDEO>

INFO: This block is present only if a valid video signal is present on the selected port.

The resolution, refresh rate, scan mode, and color space information are described in this block. The first character of this block must be **V**.

Format: V<Resolution>;<Hsync>;<Color_space>

Example: V800x600p60,378,00

Identifier	Parameter description	Parameter values
<Resolution>	<Width>x<Height><scan><Vsync>	<Width> = active video width (pixels) <Height> = active video height (pixels) <scan> = p : progressive, i : interlaced scan mode <Vsync> value (Hz)
<Hsync>	Horizontal sync	<Hsync> value (kHz)
<Color_space>	Color space information	00 = RGB444 10 = YUV422 20 = YUV444

1080p60 signal is detected with progressive scan at 60 Hz refresh rate; vertical sync value is 675 kHz and the signal is in RGB 4:4:4 color space.

Legend of the <AUDIO>

INFO: This block is present only if a valid video signal is present on the selected port.

The audio info block determines the type of the audio, the decoded sampling frequency and some further information extracted from Audio InfoFrames. The first character of this block must be **A**.

Format: A<a><c><d><ee><ff>

Example: A1C010000

PCM audio is present at 48 kHz. The codec is not specified, two audio channels are defined.

INFO: Please note that the values of the c, d, ee and ff fields are based on the audio info frame sent by the source device, while the values of a and b are based on measurements. Of course audio info frames are forwarded in unchanged form to the HDMI sink devices (e.g. AV Receivers), so that they would be able to interpret the InfoFrames correctly.

Identifier	Parameter description	Parameter values		
<a>	Audio type	0 = no audio data is present 1 = PCM audio 2 = Compressed audio 4 = High bitrate audio		
	Sampling frequency	A = 44.1 kHz C = 48 kHz D = 32 kHz E = 22.05 kHz G = 24 kHz I = 88.2 kHz J = 768 kHz K = 96 kHz M = 176.4 kHz O = 192 kHz B = no information		
<c>	Audio codec type (not specified in many cases)	0 = undetermined 1 = IEC 60958PCM 2 = AC3 3 = MPEG-1 (Layers 1&2) 4 = MP3 (MPEG-1 Layer 3) 5 = MPEG-2 (multichannel) 6 = AAC 7 = DTS 8 = ATRAC 9 = One Bit Audio A = Dolby Digital B = DTS-HD C = MLP		
<d>	Audio channel number	0 = not specified 0..7 = channel number is equal to (<d>+1)		
<ee>	Sampling frequency and sample size (encoded in HEX format and represented by binary format)	7-5 bits: reserved and shall be 0 (zero)	4-2 bits: 000 = unspecified 001 = 32 kHz 010 = 44.1 kHz 011 = 48 kHz 100 = 88.2 kHz 101 = 96 kHz 110 = 176.4 kHz 111 = 192 kHz	1-0 bits: 00 = not specified 01 = 16 bit 10 = 20 bit 11 = 24 bit
<ff>	Speaker locations	This byte describes how various speaker locations are allocated to the audio channels: FR/FL = Front Right / Front Left LFE = Low-frequency effect FC/RC = Front Center / Rear Center RR/RL = Rear Right / Rear Left FRC/FLC = Front Right Center / Front Left Center RRC/RLC = Rear Right Center / Rear Left Center See the following table for the possible values.		

<ff> value	Channel number							
	8	7	6	5	4	3	2	1
00							FR	FL
01						LFE	FR	FL
02					FC		FR	FL
03					FC	LFE	FR	FL
04				RC			FR	FL
05				RC		LFE	FR	FL
06				RC	FC		FR	FL
07				RC	FC	LFE	FR	FL
08			RR	RL			FR	FL
09			RR	RL		LFE	FR	FL
0A			RR	RL	FC		FR	FL
0B			RR	RL	FC	LFE	FR	FL
0C		RC	RR	RL			FR	FL
0D		RC	RR	RL		LFE	FR	FL
0E		RC	RR	RL	FC		FR	FL
0F		RC	RR	RL	FC	LFE	FR	FL
10	RRC	RLC	RR	RL			FR	FL
11	RRC	RLC	RR	RL		LFE	FR	FL
12	RRC	RLC	RR	RL	FC		FR	FL
13	RRC	RLC	RR	RL	FC	LFE	FR	FL
14	FRC	FLC					FR	FL
15	FRC	FLC				LFE	FR	FL
16	FRC	FLC			FC		FR	FL
17	FRC	FLC			FC	LFE	FR	FL
18	FRC	FLC		RC			FR	FL
19	FRC	FLC		RC		LFE	FR	FL
1A	FRC	FLC		RC	FC		FR	FL
1B	FRC	FLC		RC	FC	LFE	FR	FL
1C	FRC	FLC	RR	RL			FR	FL
1D	FRC	FLC	RR	RL		LFE	FR	FL
1E	FRC	FLC	RR	RL	FC		FR	FL
1F	FRC	FLC	RR	RL	FC	LFE	FR	FL

Legend of the <ADV_INFO>

This block provides information for advanced users that could be useful during a debugging process. The first character of this block must be **I**.

Format: I<a><c><d><e><f>

Example: I111190

Identifier	Parameter description	Parameter values
<a>	VSYNC polarity	0 = VSYNC polarity is negative (leading edge falls) 1 = VSYNC polarity is positive (leading edge rises)
	HSYNC polarity	0 = HSYNC polarity is negative (leading edge falls) 1 = HSYNC polarity is positive (leading edge rises)
<c>	TMDS clock line signal presence	0 = There is no change on the TMDS clock line 1 = Signal is present on the TMDS clock line
<d>	TMDS clock line stability	0 = The clock signal is unstable on the TMDS clock line 1 = The clock signal is stable on the TMDS clock line
<e>	Active Format Aspect Ratio based on AVI InfoFrame	0 = Field is not present (e.g. DVI signal) 2 = 16:9 (top) 3 = 14:9 (top) 4 = greater than 16:9 (centre) 5 = Same as picture aspect ratio 9 = 4:3 (centre) A = 16:9 (centre) B = 14:9 (centre) D = 4:3 (with shoot and protect 14:9 centre) E = 16:9 (with shoot and protect 14:9 centre) F = 16:9 (with shoot and protect 4:3 centre)
<f>	Pixel repetition factor based on AVI InfoFrame	0 = No repetition (i.e. pixel sent once) 1 = Pixel sent 2 times (i.e. repeated once) 3 = Pixel sent 4 times

Positive HSYNC and VSYNC, stable pixel clock, 4:3 aspect ratio and no pixel repetition.

Legend of the <IN_SET>

You are able to verify the actual settings on the selected input ports with this block. This block is always present. The first character is **P**.

Format: P<a>

Example: PAA

Identifier	Parameter description	Parameter values
<a>	Cable equalization level	0 = Automatic cable equalization 1 = Equalization is 3dB 2 = Equalization is 9dB 3 = Equalization is 25dB 4 = Equalization is 35dB 5 = Equalization is 40dB
	State of color range compression	The values are the same as described in the Color Range Conversion Settings section.

Automatic cable equalization and color range conversion is disabled.

7.7.4. Getting Information about an Output Port

Description: This command gets more detailed information about an output HDMI port. The response will contain information about the general signal parameters, the video resolution and mode, the audio format, other advanced parameters, the capabilities of the sink device and the current settings of this port.

The main structure is the same as described at the HDMI GET command in the [Getting Information about an Input Port](#) section. The STO response may have <VIDEO> block, <AUDIO> block and <ADV_INF> block with the same syntax as described previously, but there are also several new block types.

Command and Response

```
→ {:HDMIOGET<out>}
← (STO#<out>=<INFO>;<VIDEO>;<AUDIO>;<ADV_INFO>;<SINK_INFO>;<OUT_SET>);CrLf
```

Example

```
→ {:HDMIOGET1}
← (STO1=G10101;V800x600p60,379,00;I111100;M110111077;OAAAAAU);CrLf
```

The exact meanings of the new blocks are explained in the following sections.

Legend of the <INFO>

This block provides information about the general status of the selected HDMI output port. The first character is **G**.

Format: G<a><c><d><e>

Example: G10101

Identifier	Parameter description	Parameter values
<a>	Sink connection	0 = there is no attached sink device 1 = attached sink device is present (termination is present)
	Signal mode indicator	0 = DVI mode 1 = HDMI mode (24 bpp) 2 = HDMI mode (30 bpp), deep color 3 = HDMI mode (36 bpp), deep color
<c>	Signal validity	0 = No valid signal is routed to this port 1 = Valid video signal is present
<d>	HDCP state	0 = HDCP encryption is disabled 1 = HDCP encryption is active
<e>	Hotplug presence	0 = Hotplug detect signal is low 1 = Hotplug detect signal is high

Sink is present, DVI mode is active, valid video signal is present, HDCP encryption is disabled, hotplug signal is high.

Legend of the <SINK_INFO>

This block provides some general information about the attached sink device based on the EDID and the HDCP cypher engine. Please note that you are able to get much more detailed information by downloading the full EDID structure with the „we” command. The first character of this block is **M**.

Format: M<a><c><d><e><f><gg><h>

Example: M110111077

Identifier	Parameter description	Parameter values
<a>	HDMI compatibility	0 = Sink device doesn't support HDMI 1 = Sink device is HDMI-compatible
	HDCP authentication	0 = HDCP authentication failed 1 = HDCP authentication is successful
<c>	HDCP repeater	0 = Sink device is not a HDCP repeater 1 = Sink device is a HDCP repeater
<d>	YUV444 supportation	0 = Sink device doesn't support YUV444 color space 1 = Sink device supports YUV444 color space
<e>	YUV422 supportation	0 = Sink device doesn't support YUV422 color space 1 = Sink device supports YUV422 color space
<f>	Audio capabilities	0 = Sink device has no audio capabilities 1 = Sink device has audio capabilities
<gg>	This field represents a byte in hexadecimal format.	data bit 0 - Sink device supports 32kHz PCM audio data bit 1 - Sink device supports 44kHz PCM audio data bit 2 - Sink device supports 48kHz PCM audio data bit 3 - Sink device supports 88kHz PCM audio data bit 4 - Sink device supports 96kHz PCM audio data bit 5 - Sink device supports 176kHz PCM audio data bit 6 - Sink device supports 192kHz PCM audio data bit 7 - Reserved (Always 0 in this version of protocol)
<h>	One digit number	data bit 2 - HDMI deep color 30bits/pixel mode is supported data bit 1 - HDMI deep color 36bits/pixel mode is supported data bit 0 - YUV444 color space is supported in DC modes

HDMI and HDCP capable device, not HDCP repeater, it supports all color spaces and 32kHz, 44kHz and 48kHz PCM audio. All deep color modes are supported. Additional audio formats may be stored in the EDID.

INFO: Field <c> value is accurate only if the field is equal to 1.

Legend of the <OUT_SET>

This block contains information about the actual settings of the selected HDMI output port. The first character of the block is **O**.

Format: O<a><c><d><e><f>

Example: OAAAAAU

Identifier	Parameter description	Parameter values
<a>	HDMI mode	A = The HDMI/DVI mode selection is automatic. D = Always send DVI signal H = Force 24bits/pixel HDMI signal 1 = Force 30bits/pixel HDMI deep color signal 2 = Force 36bits/pixel HDMI deep color signal x = Don't modify this setting
	Color space	A = Automatic color space selection 1 = Force RGB 2 = Force YUV444 3 = Force YUV422 x = Don't modify this setting
<c>	Color range	A = Handle color range conversion automatically C = Compress the incoming color range to 16-235 E = Expand the incoming color range to full scale x = Don't modify this setting
<d>	PCM subsampling	A = Automatic PCM subsampling D = Disable PCM subsampling 2 = 2x PCM subsampling (it only affects 2ch PCM signals!) 4 = 4x PCM subsampling (it only affects 2ch PCM signals!) x = Don't modify this setting
<e>	HDCP handling	A = Handle HDCP automatically 1 = Always use HDCP x = Don't modify this setting
<f>	Reserved for future use.	

The HDMI/DVI mode, the color space selection, the color range conversion, the PCM subsampling, and the HDCP handling are set to automatic.

7.7.5. Setting the HDMI Output Port Parameters

Description: HDMI output cards have various settings, which can be set with this command. Every setting has an automatic mode (this is the default) when the system selects the proper conversions based on the type of the video signal and the capabilities of the sink device, but you are also able to force other conversions with this command.

If you send the first version of the command (with @SO), then the new settings will affect only the <out> output port. The @AO version will affect all HDMI output ports regardless of the value of the <out> field.

Command and Response

→ {:HDMISET#<out>@SO=<a><c><d><e>}
← (STO#<out>=<INFO><VIDEO><AUDIO><ADV_INFO><SINK_INFO><OUT_SET>);CrLf

Example

→ {:HDMISET#1@SO=H;2;x;x;}
← (STO1=G1100;OH2AAA);CrLf

The meanings of the <a>, , <c>, <d>, and <e> fields are the same as the parameters of the <OUT_SET> legend described in the [Getting Information about an Output Port](#) section.

7.7.6. Color Range Conversion Settings

Description: You are able to control the color range conversion with this command on the input ports. There are three options: leave the color range unchanged, compress or expand.

The first version of the command (@SI) will affect only one port, while the second (@AI) makes changes on all inputs. Even though the <in> field has no significance in that case, it must be valid.

Command and Response

→ {:HDMISET#<in>@SI=<a>}
← (STI#<in>@<S/A>I=<INFO><VIDEO><AUDIO><ADV_INFO><IN_SET>);CrLf

Example

→ {:HDMISET#1@SI=A}
← (STI1=S1100;V800x600p60,379,00;I111100;P2A1);CrLf

The possible values of the field <a> are:

Value	Meaning
A	No color range conversion
C	Compress the color range (0-255 > 16-235)
E	Expand the color range (16-235 > 0-255)

After the successful execution, the system is going to respond with an STI response with an included Input settings info block – so you are able to verify the new settings.

7.7.7. Measuring Timing Parameters

Description: The system continuously measures the parameters of the incoming signals such as pixel clock frequency, horizontal and vertical back porch, front porch etc. You are able to read this information from the matrix with this command. This could be useful only for advanced debugging processes. To get the active video resolution and common video parameters, please use the HDMIIGET command as explained in the [Getting Information about an Input Port](#) section.

This section assumes that you are familiar with the DVI standard and the computer science.

The `{:TIMINGS<in>}` command will request the detailed timing information on the input port `<in>`. The port number shall not be padded with zeros.

The answer repeats the command and consists of 15 data bytes. Every data byte is represented by a two-digit hexadecimal number.

Command and Response

→ `{:TIMINGS<in>}`

← `(:TIMINGS<in>=[hexadecimal data bytes])CrLf`

Example

→ `{:TIMINGS8}`

← `(:TIMINGS8=087004e2064004b031010100c00165)CrLf`

The meanings of these data bytes are:

Data bytes	Description
1	Measured interval between two HSYNC active edges. The unit of the value is unique pixels. MSB byte is first.
2	
3	Measured interval between two VSYNC active edges. The unit of the value is lines. MSB byte is first.
4	
5	Defines the width of the active display area. The unit of the value is unique pixels. MSB byte is first.
6	
7	Defines the height of the active display area. The unit of the value is unique pixels. MSB byte is first.
8	
9	VSYNC to active video lines. This is equal to vertical sync width plus vertical back porch. The unit of the value is lines.
10	Vertical sync front porch time measured in lines.
11	Reserved for future use
12	Width of the HSYNC pulse in units of unique pixels. LSB byte is first.
13	
14	V value. This number is used to determine the actual pixel clock frequency. MSB byte is first.
15	

Use the following formula to calculate the actual pixel clock frequency:

$$f_{\text{pixelclock}} = 58003,46 / V$$

INFO: The pixel clock is not equal to the TMDS clock in deep color modes. To calculate the TMDS clock, you have to determine the number of bits per pixel (bpp) by running an HDMIIGET command. The TMDS clock is equal to the pixel clock multiplied by $\text{bpp}/24$. If you want to evaluate the data rate or the needed bandwidth, you have to calculate with TMDS clock.

7.8. Programmers' Reference – Quick Summary

General Commands

Viewing the Product Type

→ {i}

Viewing the Firmware Version of the CPU

→ {f}

Viewing the Serial Number

→ {s}

Compile Time

→ {CT}

Viewing the Installed Boards

→ {is}

Viewing Firmware for All Controllers

→ {FC}

Restarting the Device

→ {RST}

Querying Health Status

→ {ST}

Viewing the Current Communication Protocol

→ {P_?}

Setting the Communication Protocol

→ {P_<x>}

Counting HDCP Keys

→ {:HDCPTEST<in>@<num>}

Clearing the HDCP Key Cache

→ {:HDCPRESET}

Port Settings

Switching One Input to One Output

→ {<in>@<out>}

Switching One Input to All Outputs

→ {<in>@0}

Muting a Specified Output

→ {#<out>}

Unmuting a Specified Output

→ {+<out>}

Locking an Output

→ {#><out>}

Unlocking an Output

→ {+<<out>}

Viewing the Connection State

→ {VC}

Viewing Mute State on All Outputs

→ {VM}

Saving a Preset

→ {\$<id>}

Loading a Preset

→ {%<id>}

Viewing a Preset Without Loading

→ {VP#<id>=?}

Naming Presets

→ {PNAME#<id>=<preset_name>}

Naming Inputs

→ {INAME#<id>=<input_name>}

Naming Outputs

→ {ONAME#<id>=<output_name>}

Querying a Preset Name

→ {PNAME#<id>=?}

Querying an Input Name

→ {INAME#<id>=?}

Querying an Output Name

→ {ONAME#<id>=?}

Reloading Default Preset Names

→ {PNAME#<id>=!}

Reloading Default Input Names

→ {INAME#<id>=!}

Reloading Default Output Names

→ {ONAME#<id>=!}

Network Configuration**Querying the Current IP Configuration**

→ {IP_CONFIG=?}

Reloading Factory Default IP Settings

→ {IP_CONFIG=!}

Enabling the DHCP IP Setting

→ {IP_CONFIG=D}

EDID Router Commands**Changing the EDID on an Input**

→ {<in>:<loc>}

Changing the EDID on All Inputs

→ {A:<loc>}

Saving an EDID to User Memory

→ {<out>><loc>}

Viewing the Emulated EDIDs on All Inputs

→ {VEDID}

Watching the EDID Validity Table

→ {WV<type>}

Viewing the EDID Header

→ {WH<loc>}

Deleting an EDID from Memory

→ {DE<loc>}

Downloading EDID Content

→ {WE<loc>}

Uploading EDID Content to the Router

→ {WL#<loc>}

→ {WB#1•<B1>•<B2>•<B3>•<B4>•<B5>•<B6>•<B7>•<B8>}

→ {WB#2•<B9>•<B10>•<B11>•<B12>•<B13>•<B14>•<B15>•<B16>}

→ {WB#32•<B249>•<B250>•<B251>•<B252>•<B253>•<B254>•<B255>•<B256>}

Port Status Commands**Input Port Status**

→ {ISD}

Output Port Status

→ {OSD}

Getting Information about an Input Port

→ {HDMIIGET<in>}

Getting Information about an Output Port

→ {HDMIOGET<out>}

Setting the HDMI Output Port Parameters

→ {HDMISET#<out>@SO=<a>;;<c>;<d>;<e>;}

Color Range Conversion Settings

→ {HDMISET#<in>@SI=<a>}

Measuring Timing Parameters

→ {TIMINGS<in>}

8

Firmware Update

This chapter is meant to help customers perform firmware updates on our products by giving a few tips on how to start and by explaining the features of the Bootloader software. To get the latest software and firmware pack, please contact support@lightware.com.

- ▶ [SHORT INSTRUCTIONS](#)
- ▶ [DETAILED INSTRUCTIONS](#)

WARNING! All EDIDs in the User Memory will be lost after the firmware update. Save the user EDIDs before doing the update.

8.1. Short Instructions

- Step 1.** Get the **Lightware Bootloader** software and the firmware files.
- Step 2.** Install the application and prepare the firmware files.
- Step 3.** Connect the computer to the matrix via LAN and launch the Bootloader.
- Step 4.** Find the device and establish the connection.
- Step 5.** Select the desired controllers.
- Step 6.** Perform the firmware update.
- Step 7.** Finish and restart the matrix.

8.2. Detailed Instructions

Step 1: Get the Lightware Bootloader Software and the Firmware Files

Use the Lightware Bootloader application to update the firmware(s) of the matrix. Please contact support@lightware.com to get the latest application and the firmware files.

Step 2: Install the Application and Prepare the Firmware Files

Run the Bootloader installer; installing the application to the default destination is recommended. If you got the firmware files, extract them to a folder on the computer.

Step 3: Connect the Computer to the Matrix via LAN and Launch the Bootloader

TIPS AND TRICKS: To avoid packet loss caused by an overloaded network, it is recommended to use the supplied cross UTP cable directly from the upgrading PC to the matrix.

If the computer is connected via a network hub, switch or router, you can set the matrix to have a static IP address or a dynamic IP address.

- **Static IP address:** in this case make sure there is no IP conflict on the network.
- **Dynamic IP address:** in this case the matrix gets an IP address automatically if a DHCP server is in the network.


TIPS AND TRICKS: If you do not know the IP address of the matrix, close the bootloader and launch the Lightware Device Controller software. The desired device and its IP address must be listed in the Device Discovery window if a proper connection has been established.

The static/dynamic IP settings can be done by the front panel buttons, please see the [IP Settings](#) section.

Run the **Lightware Bootloader** software.

Step 4: Find the Device and Establish the Connection

Make sure that no other active connection is established to the matrix (running the Lightware Device Controller software or a web browser and the built-in website). Please wait until all the devices on the network completely start up, then click on the **Find** button to query the network; the discovered devices are listed.

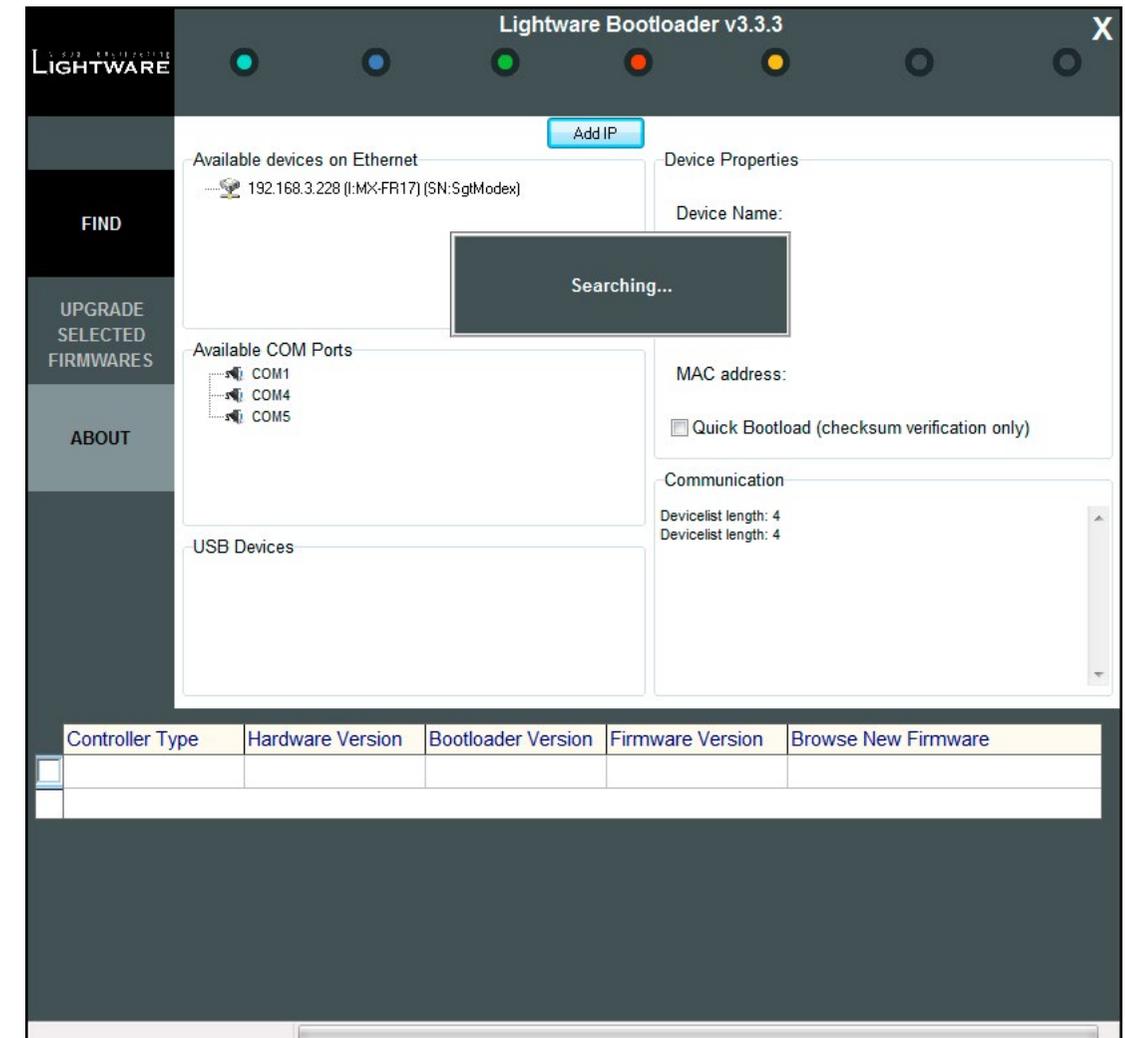

Lightware Bootloader – Searching for Devices

If the desired device is not discovered for some reason but you know its IP address, you can add it manually. Press the **Add IP** button and fill the text boxes. Double click on the **IP address**, then click on **Yes** to establish the connection. It will take 10-15 seconds to load all the information.

IP Address:


Use the following TCP Port:

Port:

ATTENTION! The bootloader application will restart the matrix when it establishes the connection. All connected DVI sources and monitors will act as if the matrix is powered down. The matrix beeps when it is rebooted.


Step 5: Select the Desired Controllers

After the connection is made, the device properties and the installed controller modules are displayed.

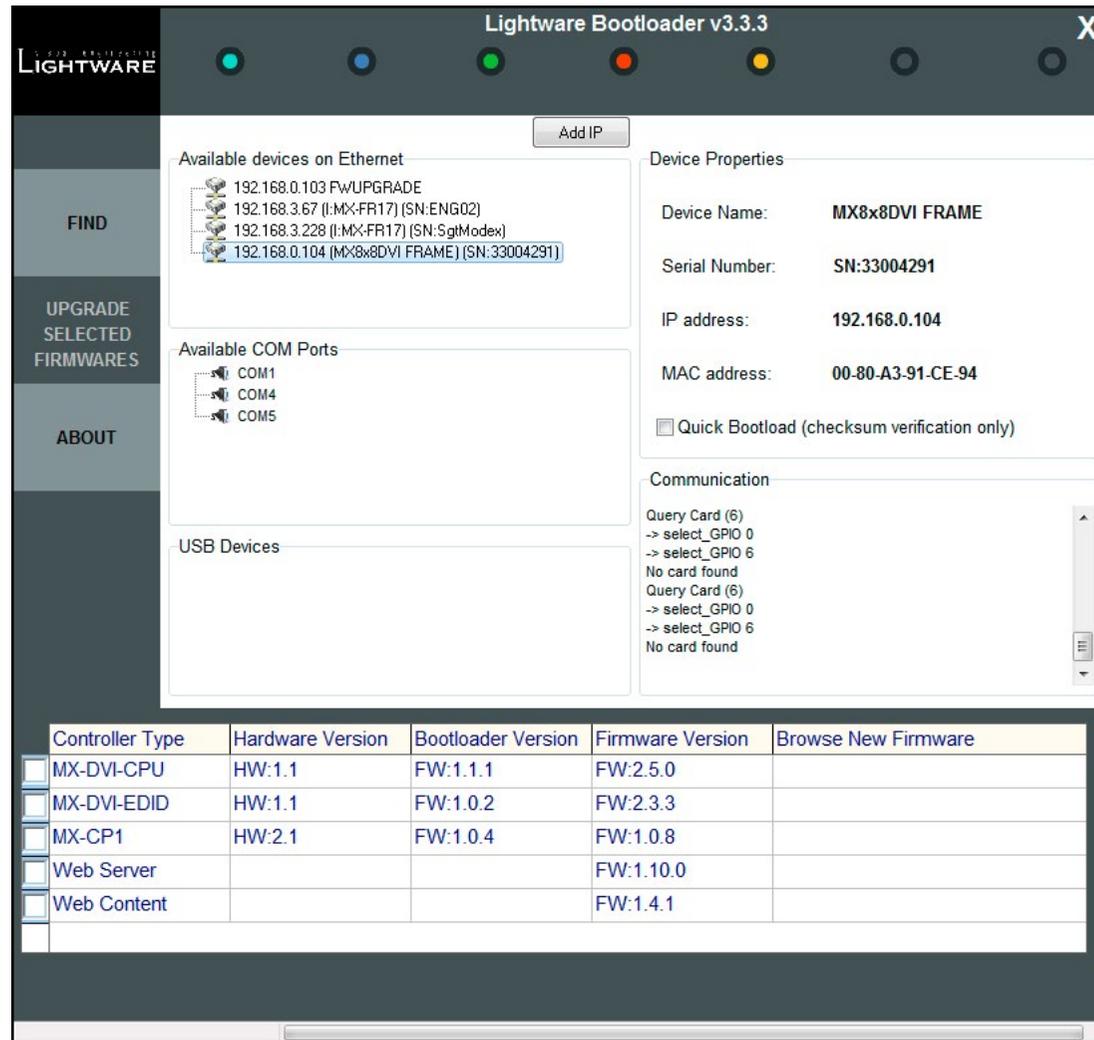

Lightware Bootloader – Details of the Device

Select the desired controllers by clicking on the checkboxes.

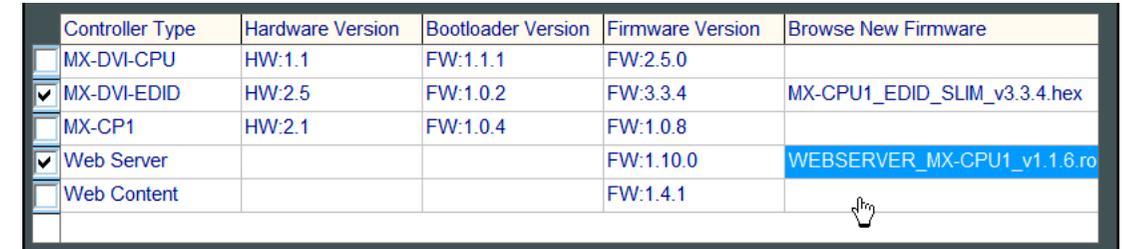

Load the new firmware files for each controller; click on the cell in the Browse New Firmware column of the desired controller (see the pointer on the picture above). A dialog window pops up to confirm whether you really want to load a new firmware (modify the path). Now you can browse the new firmware file. After opening the new file, the cell will contain the name of the firmware file.

Step 6: Perform the Firmware Update

Press the **Update selected firmwares** button; a confirmation message appears. After clicking on the **Yes** button, the selected controllers are being reprogrammed by the firmware you selected. If you selected a file that does not belong to the given controller, you will get a message. If you selected a controller to update but you had not set a firmware file to it, then you will also get a message.

Quick Bootload mode can be switched on or off at any time. It makes the bootloader software faster by only checking the checksum of the controller. No data verification is done after writing if the checksum was correct.

ATTENTION! The reprogramming can take between 3-8 minutes per controller.


A progress bar will show the current state of the reprogramming on the bottom of the main window. In certain cases, the firmware of the given controller is erased, which is also shown by the progress bar, thus the progress bar runs up twice.



Step 7: Finish and Restart the Matrix

When the reprogramming is finished, a message will appear in the bottom left corner (**Done!**). If the update was successful, the following window pops up.

The device is disconnected from the application automatically and the matrix is restarted. Now you can close the application, or you can select another matrix router to update. After closing the bootloader application, switch the updated devices off and then on. Now the matrix is ready to be used with the new firmware.

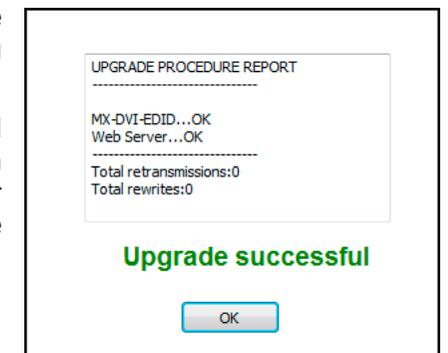

9

Troubleshooting

Usually, if the system seems not to transport the signal as expected, the best strategy for troubleshooting is to check signal integrity through the whole signal chain starting from source side and moving forward to receiver end. At first, check front panel LEDs and take the necessary steps according to their states. For more information about status LEDs, refer to the [Front View](#) section.

Pictogram Legend

-  Link to the section of connections/cabling.
-  Link to the section of front panel operation.
-  Link to the section of the LDC.
-  Link to the section of LW3 protocol commands.

Symptom	Root cause	Action	Refer to
Video signal			
No picture on the video output	Device or devices are not powered properly	Check the extenders and the other devices if they are properly powered; try to unplug and reconnect them.	
	Cable connection problem	Cables must fit very well, check all the connectors (video cables).	
	The output is muted	Check the mute state of output ports.	 6.4.1.2  7.3.8
	Display is not able to receive the video format	Check the emulated EDID; select another (e.g. emulate the display's EDID on the input port).	 6.6.1  7.5.4
	HDCP is disabled	Enable HDCP on the input port.	 6.5.4
Audio signal			
No audio is present on output	Output port is muted	Check the output port properties.	 6.4.1.2
HDMI output signal contains no audio	HDMI mode was set to DVI	Check the properties of the output port and set to HDMI or Auto.	 6.4.1.2
	DVI EDID is emulated	Check the EDID and select and HDMI EDID to emulate.	 6.6.1  7.5.4
Serial connection			
Cannot connect to the matrix via RS-232	RS-232 settings are different	Check the port settings of the connected computer. Set the default settings of the matrix.	11.2
Ethernet connection			
No LAN connection can be established	Incorrect IP address is set (fix IP)	Use a dynamic IP address by enabling the DHCP option.	 4.2.7  6.7.1  7.4.3
		Restore the factory default settings (with fix IP).	 4.3.2  6.7.1  7.4.2
	IP address conflict	Check the IP address of the other devices, too.	

10

Technologies

The following sections contain descriptions and useful technical information on how the devices work in the background. The content is based on experiences and cases we have met in practice. These sections help understand features and technical standards like the following:


- ▶ [EDID MANAGEMENT](#)
- ▶ [HDCP MANAGEMENT](#)
- ▶ [PIXEL ACCURATE RECLOCKING](#)

10.1. EDID Management

10.1.1. Understanding the EDID

The Extended Display Identification Data (EDID) is the passport of display devices (monitors, TV sets, projectors). It contains information about the capabilities of the display, such as supported resolutions, refresh rates (these are called Detailed Timings), the type and manufacturer of the display device, etc.

After connecting a source to a display (DVI, HDMI, DP), the source reads out the EDID to determine the resolution and refresh rate of the image to be transmitted.

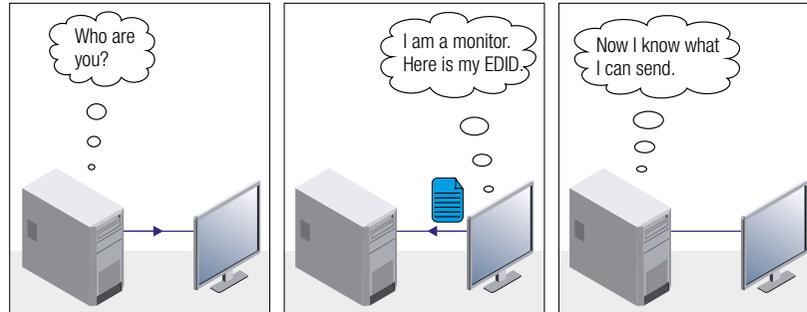

EDID Communication

Most DVI computer displays have a 128-byte-long EDID structure. However, Digital Televisions and HDMI capable displays may have another 128 bytes, which is called E-EDID and is defined by CEA (Consumer Electronics Association). This extension contains information about additional Detailed Timings, audio capabilities, speaker allocation and HDMI capabilities. It is important to know that all HDMI capable devices must have CEA extension, but not all devices with CEA extension are HDMI capable.

Common Problems Related to EDID

- Problem:** “My system consists of the following: a computer, a Lightware device, a WUXGA (1920x1200) LCD monitor, and an SXGA (1280x1024) projector. I would like to see the same image on the monitor and the projector. What EDID should I choose on the Lightware device?”
- Solution:** If you want to see the image on both displays, you need to select the resolution of the smaller display (in this case SXGA), otherwise the smaller display may not show the higher resolution image.
- Problem:** “I have changed to a different EDID on an input port of the Lightware device to have a different resolution, but nothing happens.”
- Solution:** Some graphics cards and video sources read out the EDID only after power-up and later they do not sense that EDID has been changed. You need to restart your source to make it read out the EDID again.

10.1.2. Advanced EDID Management

Each DVI sink (e.g. monitors, projectors, plasma displays, etc...) must support the EDID data structure. Source BIOS and operating systems are likely to query the sink using DDC2B protocol to determine what pixel formats and interface are supported. DVI standard uses EDID data structure to identify the monitor type and capabilities. Most DVI sources (VGA cards, set top boxes, etc.) will output DVI signal after accepting the connected sink's EDID information. In the case of EDID readout failure or missing EDID, the source will not output DVI video signal.

Lightware devices provide the Advanced EDID Management function that helps system integration. The built-in EDID Router can store and emulate factory pre-programmed- and User programmable EDIDs. The EDID of the attached monitors or projectors for each output are stored in a non-volatile memory. This way the EDID of a monitor is available when the monitor is unplugged or switched off.

Any EDID can be emulated on any input. An emulated EDID can be copied from the EDID router's memory (static EDID emulation), or from the last attached monitor's memory (dynamic EDID emulation). For example, the Lightware device can be set up to emulate a sink device that is connected to one of the outputs. In this case, the EDID automatically changes if the monitor is replaced with another display device (as long as it has a valid EDID).

The EDID is independently programmable for all inputs without affecting each other. All inputs have their own EDID circuit.

INFO: The user is not required to disconnect the video cable to change an EDID as opposed to other manufacturer's products. The EDID can be changed even if a source is connected to the input and powered ON.

INFO: When the EDID has been changed, the router toggles the HOTPLUG signal for 2 seconds. Some sources do not sense this signal. In such cases, the source device must be restarted or powered OFF and ON again.

10.2. HDCP Management

Lightware Visual Engineering is a legal HDCP adopter. Several functions have been developed which helps to solve HDCP related problems. Complex AV systems often have both HDCP and non-HDCP components. The matrix allows transmitting HDCP encrypted and unencrypted signals. The devices will be still HDCP compliant, as they will never output an encrypted signal to a non-HDCP compliant display device. If an encrypted signal is switched to a non-compliant output, a red screen alert or muted screen will appear.

10.2.1. Protected and Unprotected Content

Many video sources send HDCP protected signal if they detect that the sink is HDCP capable – even if the content is not copyrighted. This can cause trouble if an HDCP capable device is connected between the source and the display. In this case, the content cannot be viewed on non-HDCP capable displays and interfaces like event controllers. Rental and staging technicians often complain about certain laptops, which are always sending HDCP encrypted signals if the receiver device (display, matrix router, etc.) reports HDCP compliancy. Even though HDCP encryption is not required all the time (e.g. computer desktop image), certain laptops still do that.

To avoid unnecessary HDCP encryption, Lightware introduced the HDCP enabling/disabling function: the HDCP capability can be disabled in the Lightware device. If HDCP is disabled, the connected source will detect that the sink is not HDCP capable, and turn off authentication.

10.2.2. Disable Unnecessary Encryption

HDCP Compliant Sink



All the devices are HDCP-compliant, no manual setting is required, both protected and unprotected content is transmitted and displayed on the sink.

Not HDCP-compliant Sink 1.

Not-HDCP compliant sink is connected to the matrix. Some sources (e.g. computers) always send HDCP encrypted signals if the receiver device reports HDCP compliancy, however, HDCP encryption is not required all the time (e.g. computer desktop image). If HDCP is enabled in the matrix, the image will not be displayed on the sink.



Setting the HDCP parameter to Auto on the output port and disabling HDCP on the input port, the transmitted signal will not be encrypted if the content is not protected. Thus, non-HDCP compliant sinks will display non-encrypted signal.

Not HDCP-compliant Sink 2.



The layout is the same as in the previous case: non-HDCP compliant display device is connected to the matrix, but the source would send protected content with encryption. If HDCP is enabled on the input port of the matrix, the source will send encrypted signal. The sink is not HDCP compliant, thus it will not display the video signal (but blank/red/muted/etc. screen). If HDCP is disabled on the input port of the matrix, the source will not send the signal. The solution is to replace the display device with an HDCP-capable one.


10.3. Pixel Accurate Reclocking

Signal reclocking is an essential important procedure in digital signal transmission. After passing the reclocking circuit, the signal becomes stable, jitter-free, and can be transmitted over more equipment like processors, or event controllers. Without reclocking, sparkles, noise, and jaggies appear on the image.

Lightware's sophisticated Pixel Accurate Reclocking technology fixes more problems than general TMDS reclocking. It removes not only intra-pair skew, but inter-pair skew as well. The Pixel Accurate Reclocking circuit eliminates the following errors.


Intra-pair skew

Skew between the + and - wires within a differential wire pair (e.g. Data2- and Data2+). It's caused by different wire lengths or slightly different wire construction (impedance mismatch) in the DVI cable. It results in jitter.

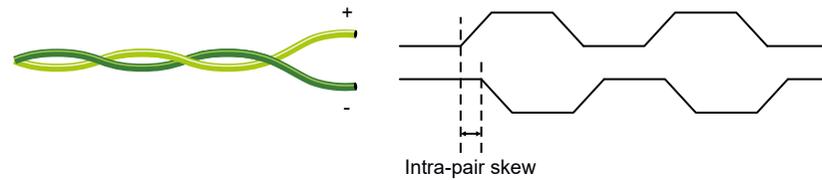


Inter-pair skew

Skew between two differential wire pairs in a cable. It is caused by different wire pair lengths or different number of twists in the DVI cable. Too much inter-pair skew results in color shift in the picture or sync loss.

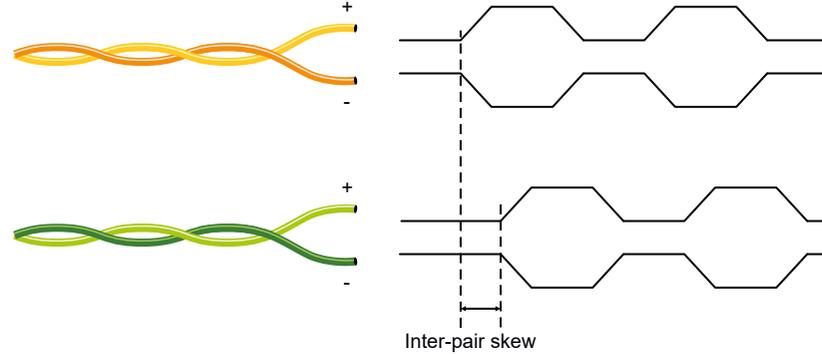


Jitter

Signal instability in the time domain. The time difference between two signal transitions should be a fixed value, but noise and other effects cause variations.

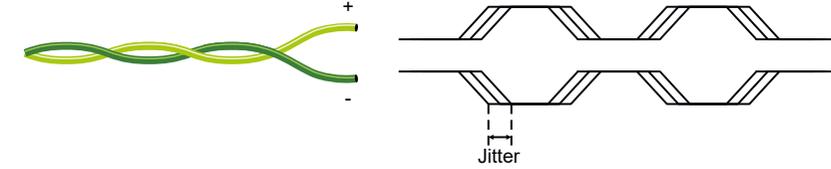

Noise

Electromagnetic interference between other electronic devices such as mobile phones, motors, etc. and the DVI cable are coupled onto the signal. Too much noise results in increased jitter.

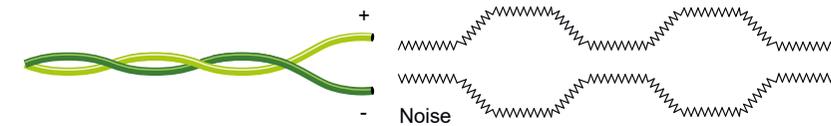

11

Appendix

Tables, drawings, guides, and technical details as follows:

- ▶ [SPECIFICATIONS](#)
- ▶ [FACTORY DEFAULT SETTINGS](#)
- ▶ [FACTORY EDID LIST](#)
- ▶ [MECHANICAL DRAWINGS](#)
- ▶ [FURTHER INFORMATION](#)

11.1. Specifications

General

Compliance	CE, UKCA
EMC (emission)	EN 55032:2015+A1:2020
EMC (immunity)	EN 55024:2011+A11:2020
RoHS	EN 63000:2018
Electrical safety	EN 60065:2014 Eighth Edition
Warranty	3 years
Cooling	Fan, air flows right to left (as viewed from front)
Operating temperature	0 to +55°C (+32 to +122°F)
Operating humidity	10% to 90%, non-condensing

Power

Heat dissipation	85 BTU/h (min), 120 BTU/h (max.)
Power source	In 100-240 V AC, 50/60 Hz
Power consumption	94.3 W (max)

Enclosure

Rack mountable	Yes
Material	1 mm steel
Dimensions in mm	446 (482*) W x 418.8 D x 43.9 H
Dimensions in inch	17.5 (18.9*) W x 16.2 D x 1.7 H
Weight	6250 g

* without rack ears

Audio/Video ports

HDMI port

HDMI port connector type	19-pole HDMI Type A receptacle
Standard	HDMI 1.3
Max. video resolutions	2048x1080@60 Hz, 36 bit
Color depth	Deep color support up to 36 bits, 12 bit/color
Audio formats	8 channel PCM, Dolby TrueHD, DTS-HD Master Audio 7.1
Reclocking	Pixel Accurate Reclocking
HDCP compliant	Yes

DVI-I port with DVI-D support

DVI port connector type	29-pole, DVI-I
Standard	DVI 1.0
Max. video resolutions	2048x1080@60 Hz, 36 bit
Color depth	Deep color support up to 36 bits, 12 bit/color
Reclocking	Pixel Accurate Reclocking
HDCP compliant	Yes

S/PDIF port

Connector type	RCA receptacle
Audio format	S/PDIF
Supported sample rates	16 to 48 kHz
AES/EBU compatibility	No
Bit depths	Up to 24 bits

Control ports

LAN control

Connector type	RJ45
Standard	10 Base-T or 100 Base-TX (auto-sensing)

Serial control

Serial port connector	9-pole D-sub
Standards	RS-232

INFO: Specifications are subject to change without notice.

11.2. Factory Default Settings

Parameter	Setting/Value
Port settings	
HDCP	Enabled
Input equalization	Auto
Input color range	No change
Output HDMI mode	Auto
Output HDCP mode	Auto
Output color space	Auto
Output color range	Auto
EDID settings	
Emulated EDID at input ports	LWR 1920x1200@59.95Hz UniversalEDID
Network settings	
IP address	192.168.254.254
Subnet mask	255.255.0.0
Static gateway	192.168.0.1
Port number	10001
DHCP	Disabled
Serial port settings	
Baud rate	9600
Databits	8
Parity	No
Stopbits	1

11.3. Factory EDID List

Mem.	Resolution		
F1	640 x	480	@ 60.0 Hz
F2	640 x	480	@ 75.0 Hz
F3	848 x	480	@ 60.0 Hz
F4	800 x	600	@ 50.0 Hz
F5	800 x	600	@ 60.30 Hz
F6	800 x	600	@ 74.99 Hz
F7	1024 x	768	@ 49.98 Hz
F8	1024 x	768	@ 60.0 Hz
F9	1024 x	768	@ 75.2 Hz
F10	1152 x	864	@ 75.0 Hz
F11	1280 x	768	@ 50.0 Hz
F12	1280 x	768	@ 59.92 Hz
F13	1280 x	768	@ 75.0 Hz
F14	1360 x	768	@ 60.1 Hz
F15	1364 x	768	@ 50.0 Hz
F16	1364 x	768	@ 59.93 Hz
F17	1364 x	768	@ 74.98 Hz
F18	1280 x	1024	@ 50.0 Hz
F19	1280 x	1024	@ 60.1 Hz
F20	1280 x	1024	@ 75.1 Hz
F21	1366 x	1024	@ 59.99 Hz
F22	1400 x	1050	@ 49.99 Hz
F23	1400 x	1050	@ 59.99 Hz
F24	1400 x	1050	@ 75.0 Hz
F25	1680 x	1050	@ 59.99 Hz


Mem.	Resolution		
F26	1600 x	1200	@ 50.0 Hz
F27	1600 x	1200	@ 60.0 Hz
F28	1920 x	1200	@ 59.55 Hz
F29	1920 x	1200	@ 50.0 Hz
F30	1440 x	480i	@ 60.3 Hz
F31	640 x	480	@ 59.94 Hz
F32	720 x	480	@ 59.92 Hz
F33	1440 x	576i	@ 50.6 Hz
F34	720 x	576p	@ 50.0 Hz
F35	1280 x	720p	@ 50.0 Hz
F36	1280 x	720p	@ 60.0 Hz
F37	1920 x	1080i	@ 50.3 Hz
F38	1920 x	1080i	@ 50.0 Hz
F39	1920 x	1080i	@ 60.5 Hz
F40	1920 x	1080	@ 24.0 Hz
F41	1920 x	1080	@ 24.99 Hz
F42	1920 x	1080	@ 30.0 Hz
F43	1920 x	1080	@ 50.0 Hz
F44	1920 x	1080	@ 49.99 Hz
F45	1920 x	1080	@ 60.0 Hz
F46	2048 x	1080	@ 49.99 Hz
F47	2048 x	1080	@ 50.0 Hz
F48	2048 x	1080	@ 59.99 Hz
F49	Universal EDID		
F50	2560 x	1600	@ 59.85 Hz

INFO: Please note that minor changes in the factory EDID list may be applied in further firmware versions.


11.4. Mechanical Drawings

The following drawings present the physical dimensions of the receiver. Dimensions are in mm.


Front View

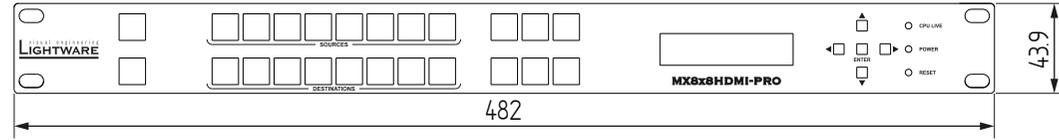


Rear View

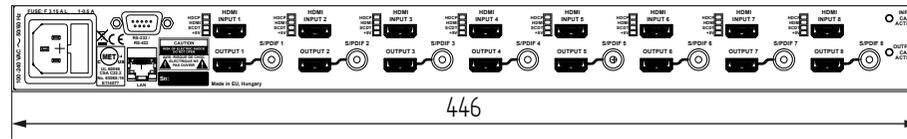

Side View

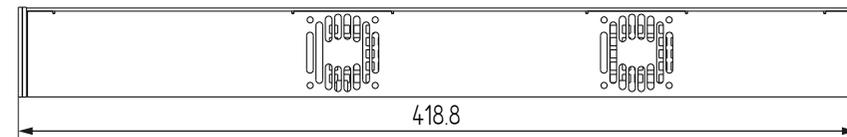

Top View

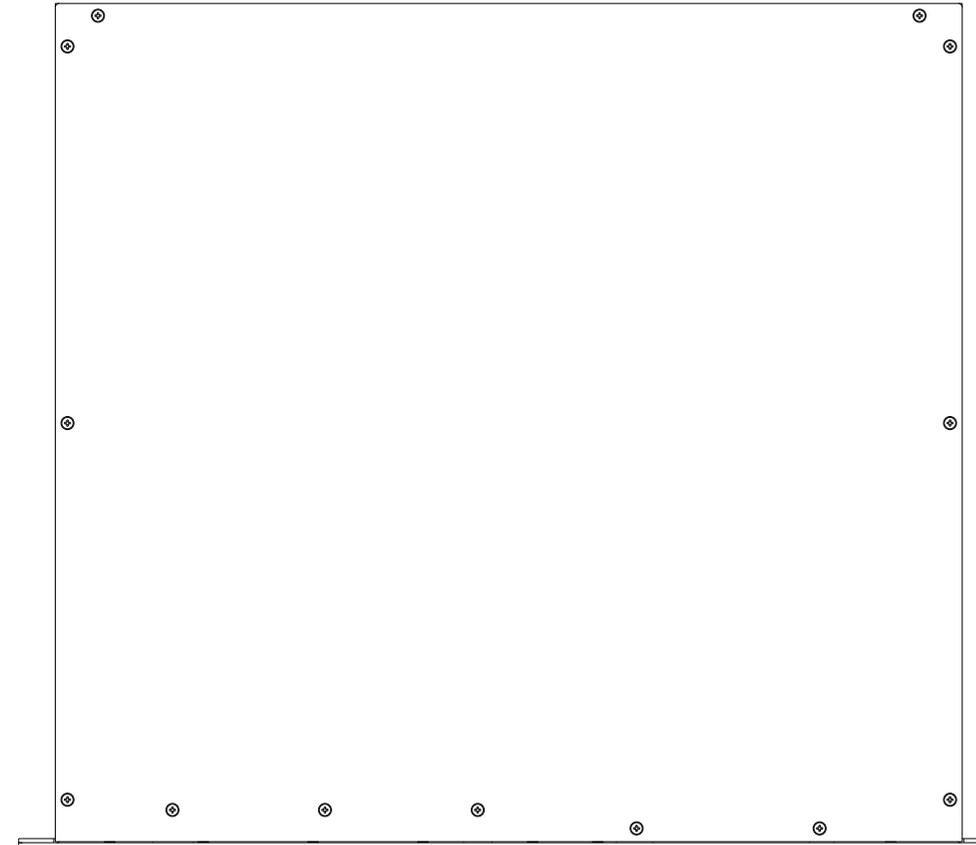

11.5. Further Information

Limited Warranty Statement

1. Lightware Visual Engineering PLC (Lightware) warrants to all trade and end user customers that any Lightware product purchased will be free from manufacturing defects in both material and workmanship for three (3) years from purchase unless stated otherwise below. The warranty period will begin on the latest possible date where proof of purchase/delivery can be provided by the customer. In the event that no proof can be provided (empty 'Date of purchase' field or a copy of invoice), the warranty period will begin from the point of delivery from Lightware.

1.1. 25G and MODEX product series will be subject to a seven (7) year warranty period under the same terms as outlined in this document.

1.2. If during the first three (3) months of purchase, the customer is unhappy with any aspect of a Lightware product, Lightware will accept a return for full credit.

1.3. Any product that fails in the first six (6) months of the warranty period will automatically be eligible for replacement and advanced replacement where available. Any replacements provided will be warranted for the remainder of the original unit's warranty period.

1.4. Product failures from six (6) months to the end of the warranty period will either be repaired or replaced at the discretion of Lightware. If Lightware chooses to replace the product, then the replacement will be warranted for the remainder of the original unit's warranty period.

2. The above-stated warranty and procedures will not apply to any product that has been:

2.1. Modified, repaired or altered by anyone other than a certified Lightware engineer unless expressly agreed beforehand.

2.2. Used in any application other than that for which it was intended.

2.3. Subjected to any mechanical or electrical abuse or accidental damage.

2.4. Any costs incurred for repair/replacement of goods that fall into the above categories (2.1., 2.2., 2.3.) will be borne by the customer at a pre-agreed figure.

3. All products to be returned to Lightware require a return material authorization number (RMA) prior to shipment, and this number must be clearly marked on the box. If an RMA number is not obtained or is not clearly marked on the box, Lightware will refuse the shipment.

3.1. The customer will be responsible for in-bound and Lightware will be responsible for out-bound shipping costs.

3.2. Newly repaired or replaced products will be warranted to the end of the originally purchased product's warranty period.

Document Revision History

Rev.	Release date	Changes	Editor
1.0	04-09-2009	Initial version	Tibor Fejes
...			
3.2	25-11-2022	Minor changes for HTML export	Nikolett Keindl
3.3	12-12-2023	Specifications updated	Tamas Forgacs

Contact Us

sales@lightware.com

+36 1 255 3800

support@lightware.com

+36 1 255 3810

Lightware Visual Engineering PLC.

Peterdy 15, Budapest H-1071, Hungary

www.lightware.com